


LUGGAGE COMPARTMENT DOOR SUPPORT REPLACEMENT

BO401-01

1. REMOVE LUGGAGE COMPARTMENT DOOR SUPPORT

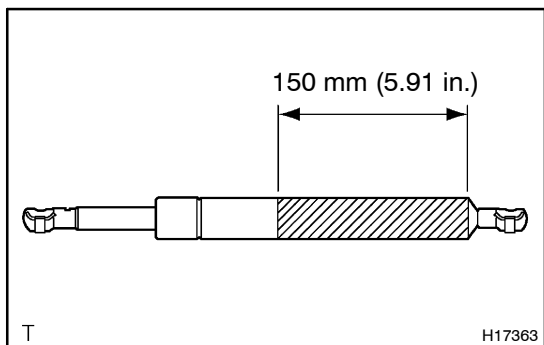

2. IF NECESSARY, REPLACE LUGGAGE COMPARTMENT DOOR SUPPORT

NOTICE:**Handling the support.**

- Do not disassemble the support as the cylinder is filled with pressurized gas.
 - If the support is to be replaced, drill a 2.0 ~ 3.0 mm (0.079 ~ 0.118 in.) hole in the area shown in the illustration to completely release the high pressure gas before disposing of it.
 - When drilling, chips may fly out so work carefully.
 - The gas is colorless, odorless and non - toxic.
 - When working, handle the support carefully. Never score or scratch the exposed part of the piston rod, and allow any paint or oil to get on it.
 - Do not turn the piston rod and cylinder with the support fully extended.
3. INSTALL LUGGAGE COMPARTMENT DOOR SUPPORT