


## RADIATOR SUPPORT (ASSY) REPLACEMENT

### 1. REMOVE RADIATOR SUPPORT

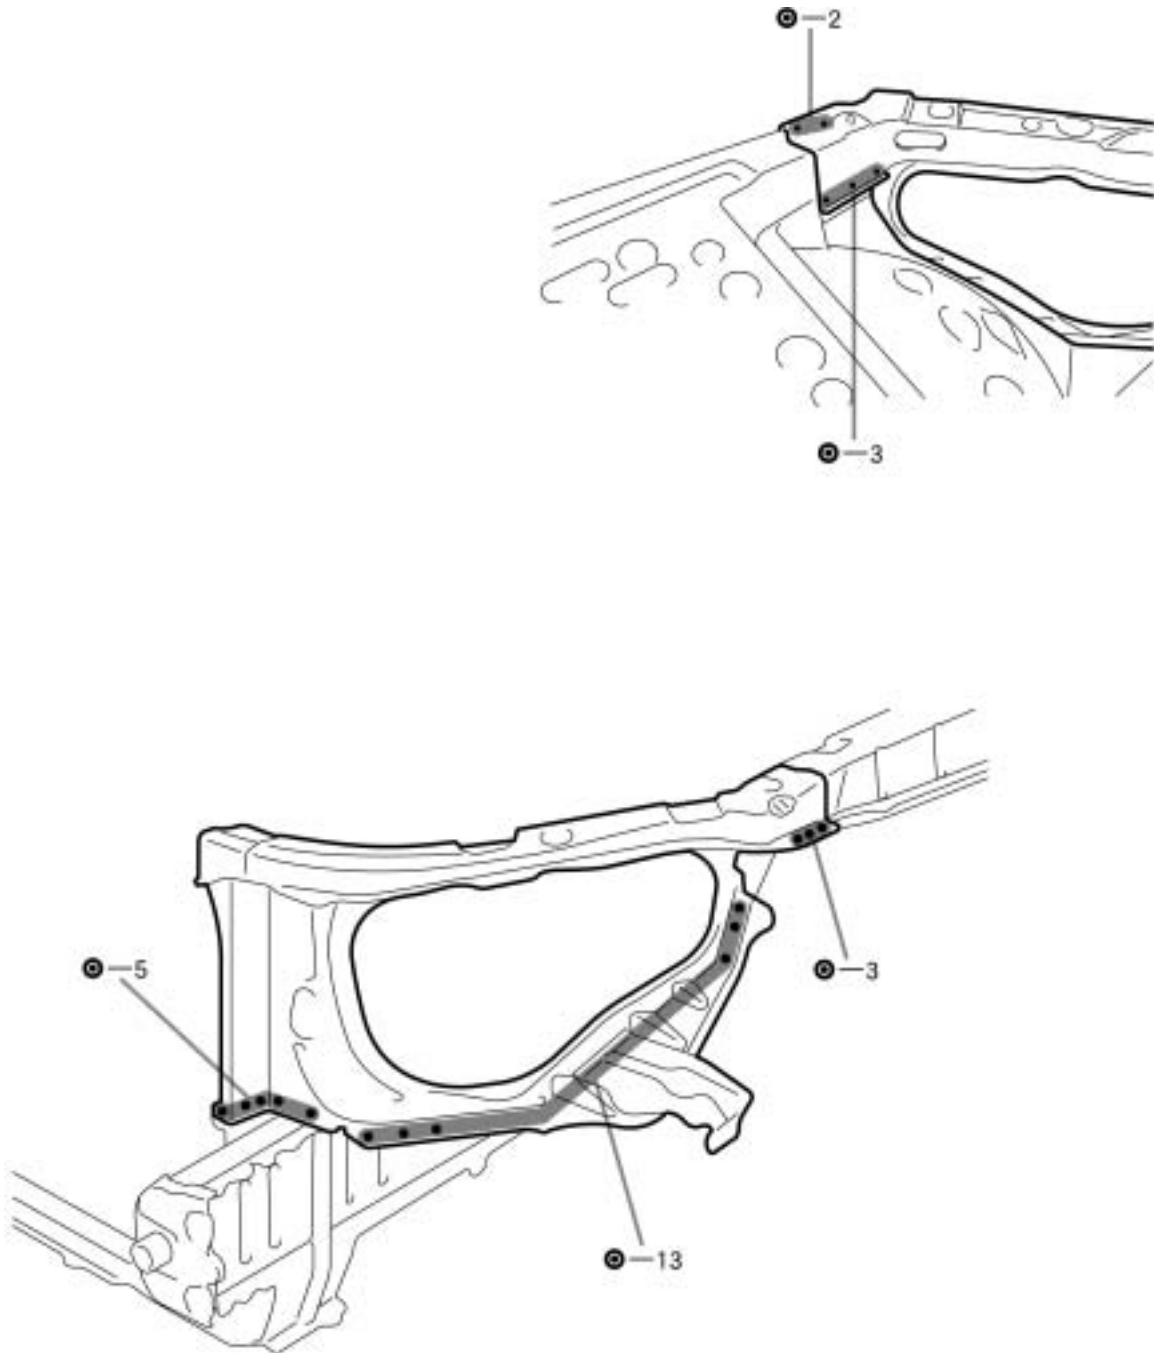


## 2. INSTALL RADIATOR SUPPORT

- (a) Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

HINT:

First install the radiator upper support.

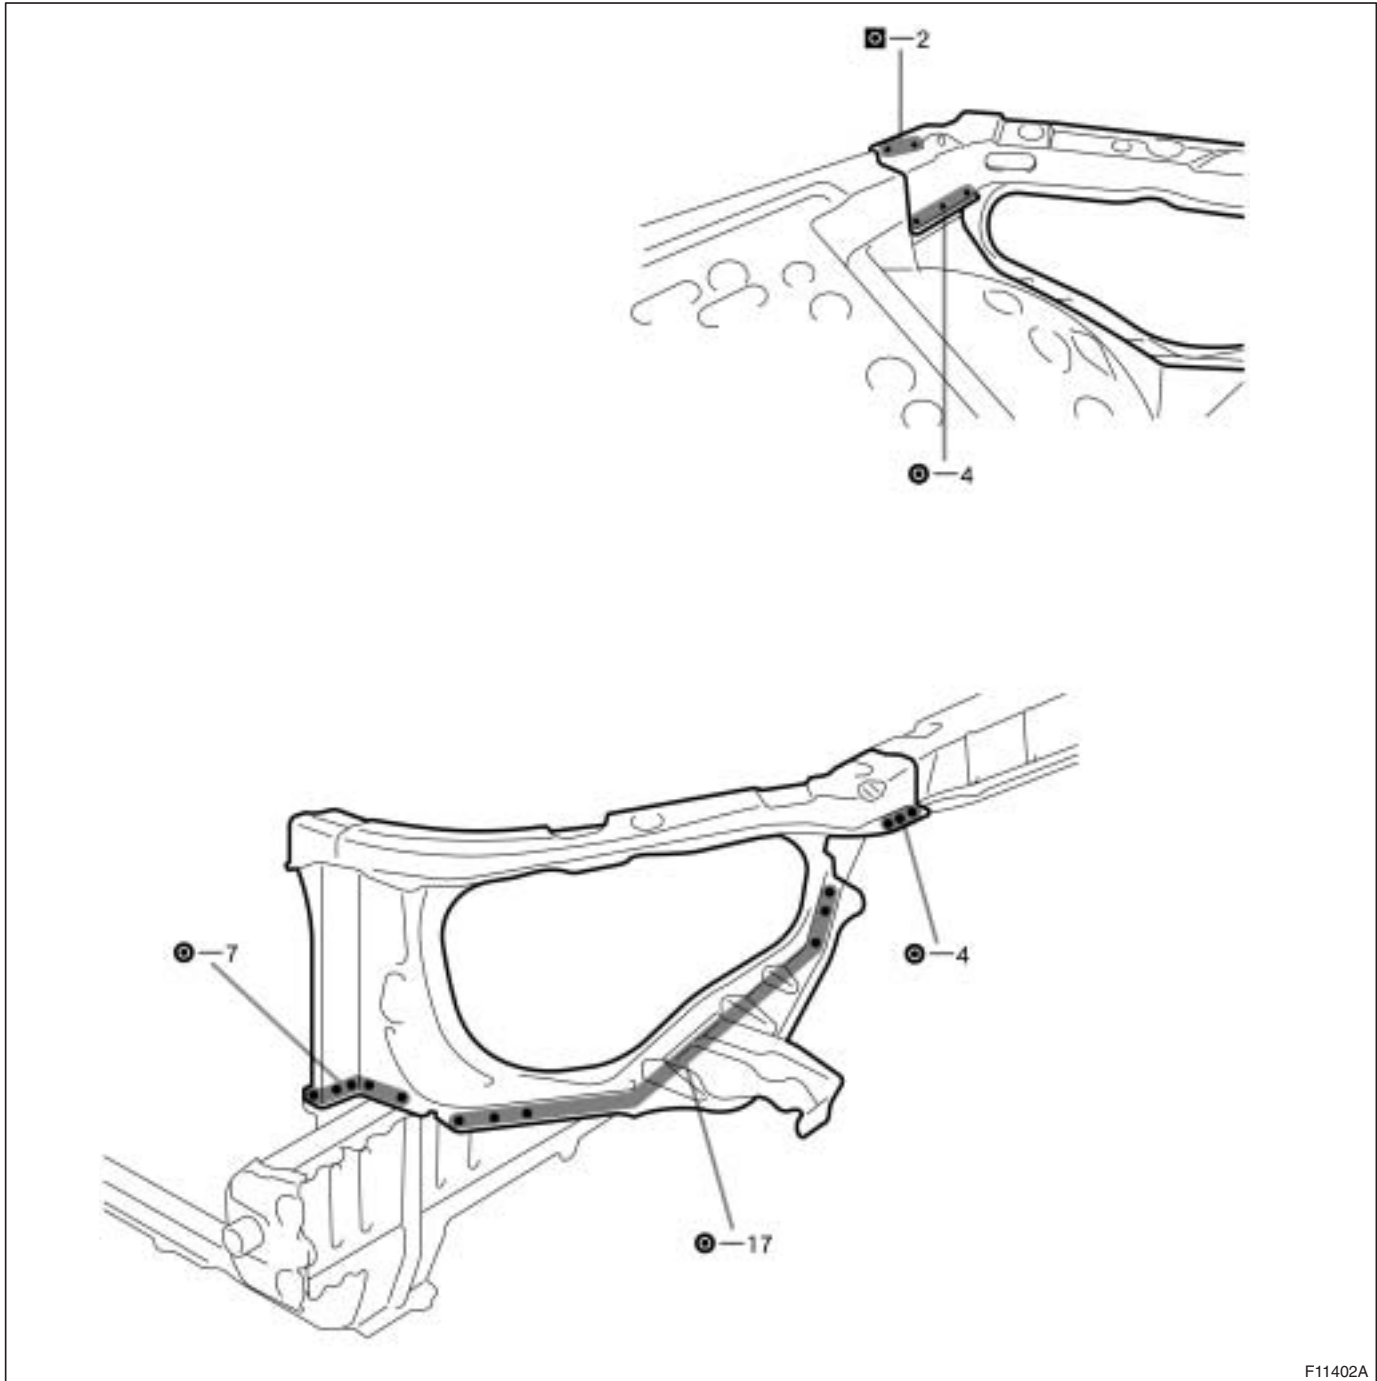

F11402A

## 3. MEASURING THE ENGINE COMPARTMENT DIMENSIONS (See page BP-88)

## 4. APPLYING SEALER TO THE ENGINE COMPARTMENT (See page PC-1)

## 5. APPLYING ANTI-RUST AGENT

- (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.