



FRONT AIRBAG SENSOR COMPONENTS

RS0ND-02


Air Cleaner Assembly

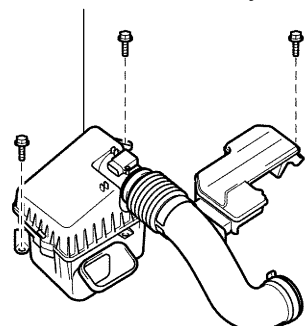

No. 1 Air Cleaner Inlet

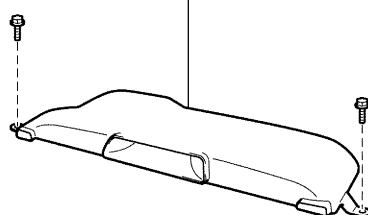


20 (205, 15)

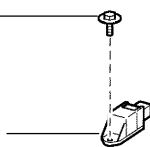Front Airbag
Sensor (RH)

20 (205, 15)



Front Airbag Sensor (LH)

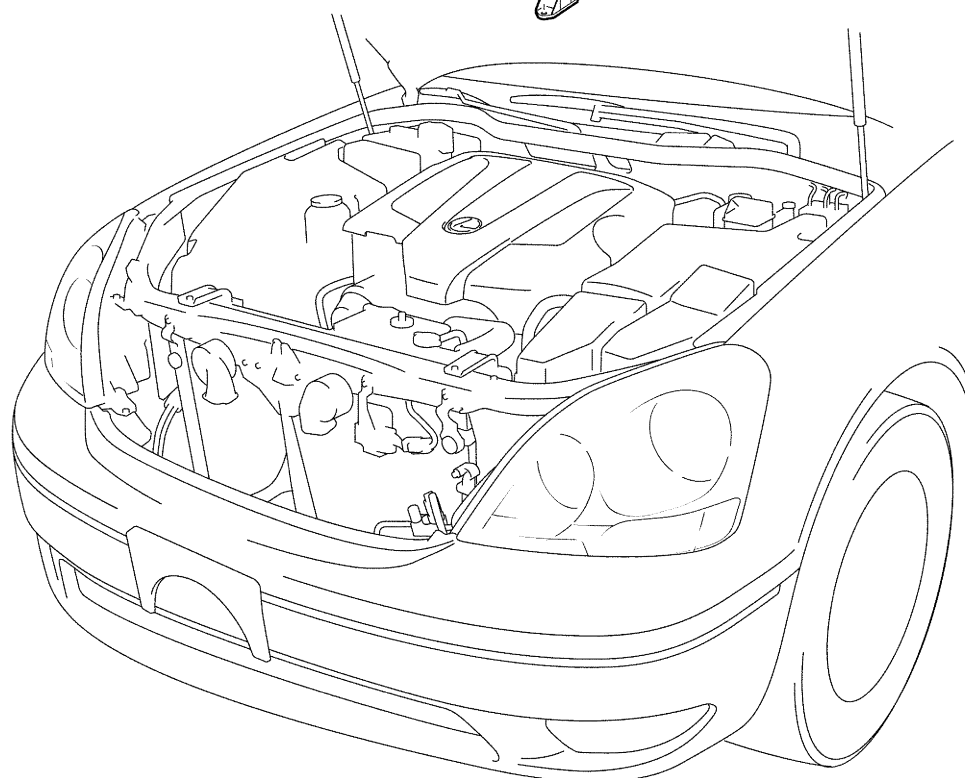

N·m (kgf·cm, ft·lbf) : Specified torque

P

H17078