


MIRROR DEFOGGER CIRCUIT

CIRCUIT DESCRIPTION

The door ECU operates the mirror heater when it receives signals from the defogger switch, wiper switch and rain sensor.

WIRING DIAGRAM

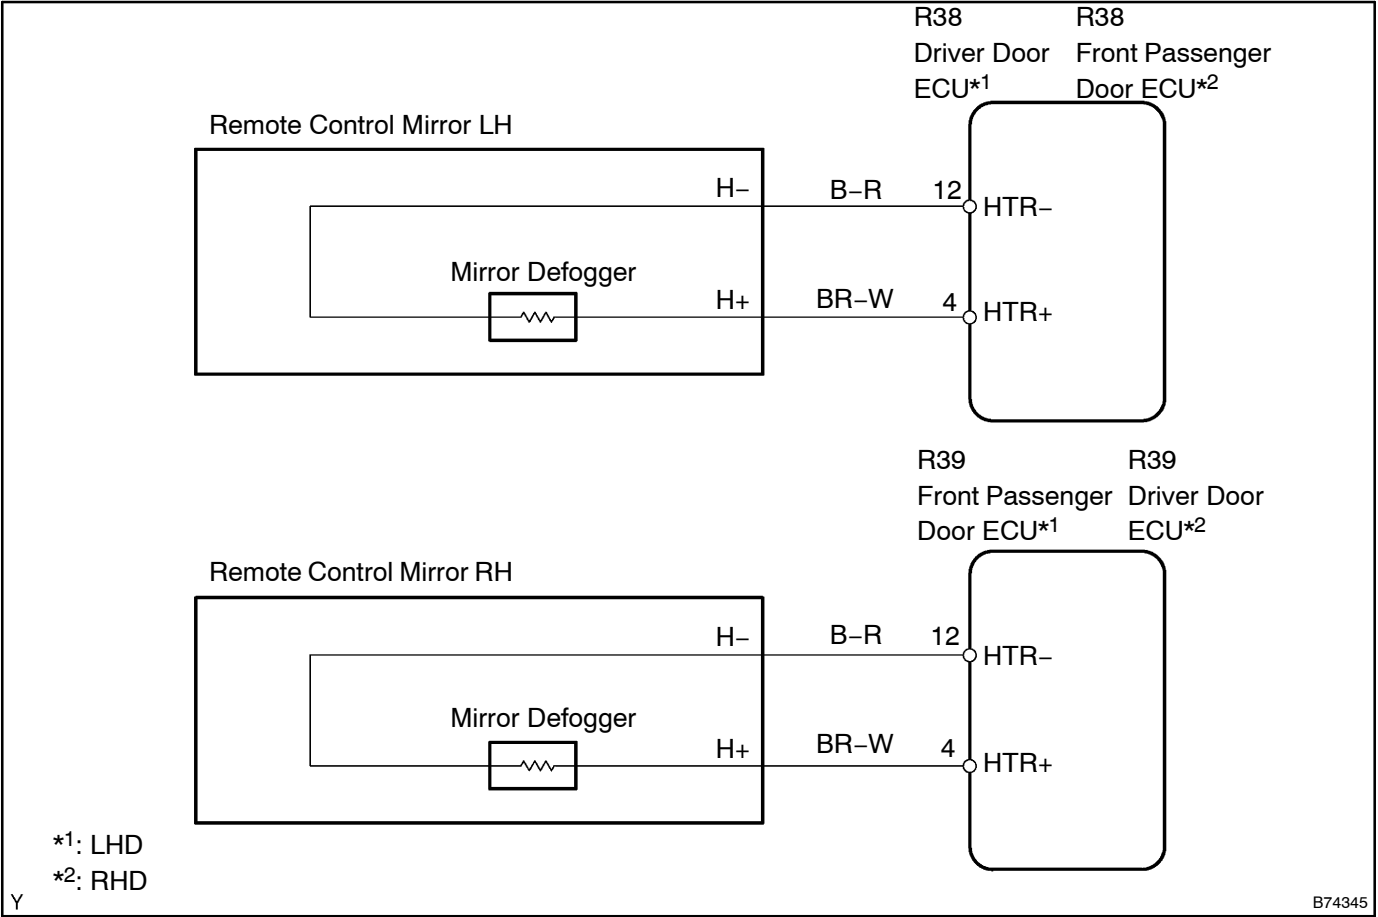

INSPECTION PROCEDURE

1 PERFORM ACTIVE TEST USING INTELLIGENT TESTER

- (a) Connect the Intelligent Tester II to the DLC3.
 (b) Turn the Ignition switch ON and press the Intelligent Tester II main switch ON.
 (c) Select the item below in the ACTIVE TEST and then check that the mirror defogger operates.

Door ECU:

Item	Test Details
Mirr Heater	Mirror defogger operation OFF/ON

OK:

The mirror defogger operates normally.

NG

Go to step 2

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN ON PROBLEM SYMPTOMS TABLE
 (See page 05-2080)

2 INSPECT MIRROR DEFOGGER (See page 70-26)

NG

REPLACE REMOTE CONTROL MIRROR

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN ON PROBLEM SYMPTOMS TABLE
 (See page 05-2080)