


REMOVAL

1. DRAIN ENGINE COOLANT FROM RADIATOR

HINT:


It is not necessary to drain out all the coolant.

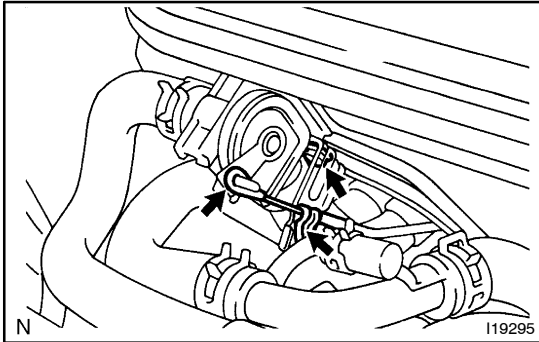

2. DISCONNECT WATER VALVE CONTROL CABLE

HINT:

At the time of installation, please refer to the following item.
After connection, check water valve operation.

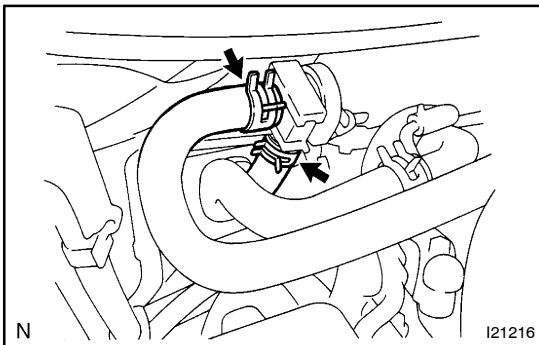

3. DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPE AND WATER VALVE

- (a) Using pliers, grip the claw of the hose clip and slide the hose clip along the hose.
- (b) Disconnect the water hoses.

HINT:

At the time of installation, please refer to the following item.
Push the water hose onto the water valve as far as the water valve.

4. REMOVE WATER VALVE

Remove the bolt and water valve.