

HEADLAMP SWIVEL ECU ASSY (RHD)


REPLACEMENT

6511K-01

HINT:

Install is in the reverse order of removal.

1. **PRECAUTION** (SEE PAGE 60-1)
2. **SEPARATE BATTERY NEGATIVE TERMINAL** (SEE PAGE 60-1)
3. **REMOVE INSTRUMENT CLUSTER FINISH PANEL CENTER LOWER** (SEE PAGE 71-6)
4. **REMOVE INSTRUMENT CLUSTER FINISH PANEL END** (SEE PAGE 71-6)
5. **REMOVE INSTRUMENT PANEL UNDER COVER SUB-ASSY NO.1** (SEE PAGE 71-6)
6. **REMOVE OUTER MIRROR SWITCH ASSY** (SEE PAGE 71-6)
7. **REMOVE SWITCH BASE HOLE COVER** (SEE PAGE 71-6)
8. **REMOVE INSTRUMENT PANEL SAFETY PAD SUB-ASSY NO.1** (SEE PAGE 71-6)
9. **REMOVE INSTRUMENT PANEL AIR BAG ASSY LOWER NO.1** (SEE PAGE 60-58)
10. **REMOVE MULTIPLEX TILT & TELESCOPIC ECU** (SEE PAGE 50-26)

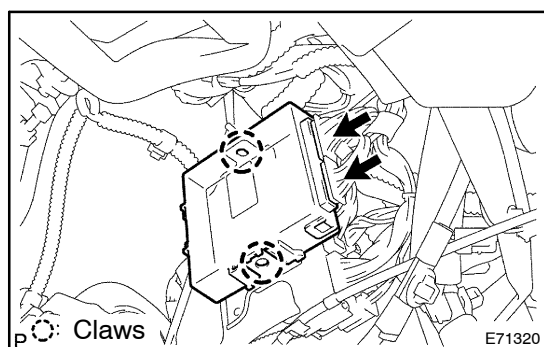

11. REMOVE HEADLAMP SWIVEL ECU ASSY

- (a) Disconnect the connector.
- (b) Disengage the claws, and remove the headlamp swivel ECU.

12. **CONNECT BATTERY NEGATIVE TERMINAL** (SEE PAGE 60-1)
13. **INSPECT SRS WARNING LIGHT** (SEE PAGE 05-954)
14. **PERFORM INITIALIZATION** (SEE PAGE 01-20)