

<b>DTC</b>	<b>B1817</b>	<b>SHORT IN P SQUIB (DUAL STAGE – 2ND STEP) CIRCUIT (TO GROUND)</b>
------------	--------------	---------------------------------------------------------------------

## CIRCUIT DESCRIPTION

The P squib (Dual stage – 2nd step) circuit consists of the airbag sensor assy center and the front passenger airbag assy.

The circuit instructs the SRS to deploy when deployment conditions are met.

DTC B1817 is recorded when a short to ground is detected in the P squib (Dual stage – 2nd step) circuit.

DTC No.	DTC Detecting Condition	Trouble Area
B1817	<ul style="list-style-type: none"><li>• When the airbag sensor assy center receives a short to ground signal in the P squib (Dual stage – 2nd step) circuit for 0.5 seconds.</li><li>• P squib (Dual stage – 2nd step) malfunction</li><li>• Airbag sensor assy center malfunction</li></ul>	<ul style="list-style-type: none"><li>• Instrument panel wire</li><li>• Front passenger airbag assy (P squib, Dual stage – 2nd step)</li><li>• Airbag sensor assy center</li></ul>

## WIRING DIAGRAM

See [page 05-1058](#).


## INSPECTION PROCEDURE

### CAUTION:

**Be sure to perform the following procedures before troubleshooting to avoid unexpected airbag deployment.**

- (a) Turn the ignition switch to the LOCK position.
- (b) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- (c) Disconnect the connectors from the airbag sensor assy center.
- (d) Disconnect the connectors from the horn button assy.
- (e) Disconnect the connector from the front passenger airbag assy.
- (f) Disconnect the connector from the instrument panel airbag assy lower No.1.
- (g) Disconnect the connector from the instrument panel airbag assy lower No.2.
- (h) Disconnect the connector from the front seat airbag assy LH.
- (i) Disconnect the connector from the front seat airbag assy RH.
- (j) Disconnect the connector from the curtain shield airbag assy LH.
- (k) Disconnect the connector from the curtain shield airbag assy RH.
- (l) Disconnect the connector from the front seat outer belt assy LH.
- (m) Disconnect the connector from the front seat outer belt assy RH.
- (n) Disconnect the connectors from the rear seat 3 point type outer belt assy.

### 1 CHECK INSTRUMENT PANEL WIRE(P SQUIB, DUAL STAGE - 2ND STEP CIRCUIT)

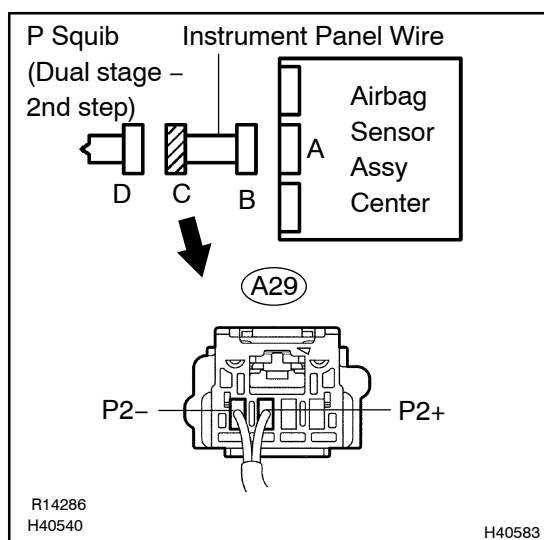

- (a) Measure the resistance according to the value(s) in the table below.

#### Standard:


Tester connection	Condition	Specified condition
A29-3 (P2+) - Body ground	Always	1 MΩ or Higher
A29-4 (P2-) - Body ground	Always	1 MΩ or Higher

**NG**

**REPAIR OR REPLACE INSTRUMENT PANEL WIRE**

**OK**

## 2 CHECK AIR BAG SENSOR ASSY CENTER

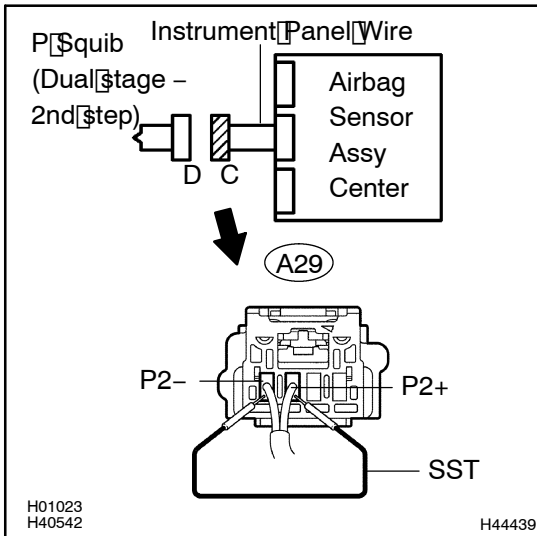

- Connect the connectors to the airbag sensor assy center.
- Using SST, connect A29-3 (P2+) and A29-4 (P2-) of connector "C".  
SST 09843-18040
- Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- Clear the DTCs stored in memory (see page 05-959).
- Turn the ignition switch to the LOCK position.
- Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- Check the DTCs (see page 05-959).

**OK:**

**DTC B1817 is not output.**

**HINT:**

Codes other than code B1817 may be output at this time, but they are not related to this check.


**NG**

**REPLACE AIR BAG SENSOR ASSY CENTER**  
(SEE PAGE 60-74)

**OK**

**3 CHECK FRONT PASSENGER AIRBAG ASSY (P-SQUIB, DUAL STAGE - 2ND STEP)**

P-Squib  
(Dual stage -  
2nd step)

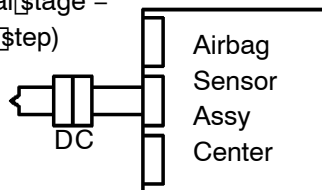

H01024

H44393

- (a) Turn the ignition switch to the LOCK position.
- (b) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- (c) Disconnect the SST from connector "C".
- (d) Connect the connector to the front passenger airbag Assy.
- (e) Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- (f) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- (g) Clear the DTCs stored in memory (see page 05-959).
- (h) Turn the ignition switch to the LOCK position.
- (i) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- (j) Check the DTCs (see page 05-959).

**OK:****DTC B1817 is not output.****HINT:**

Codes other than code B1817 may be output at this time, but they are not related to this check.

**NG**

**REPLACE FRONT PASSENGER AIRBAG ASSY  
(SEE PAGE 60-35)**

**OK****USE SIMULATION METHOD TO CHECK (SEE PAGE 05-954)****HINT:**

- Perform the simulation method by selecting the check mode with the Intelligent Tester II (see page 05-960).
- After selecting the check mode, perform the simulation method by wiggling each connector of the airbag system or driving the vehicle on a city or rough road (see page 05-960).