




## SYSTEM DIAGRAM

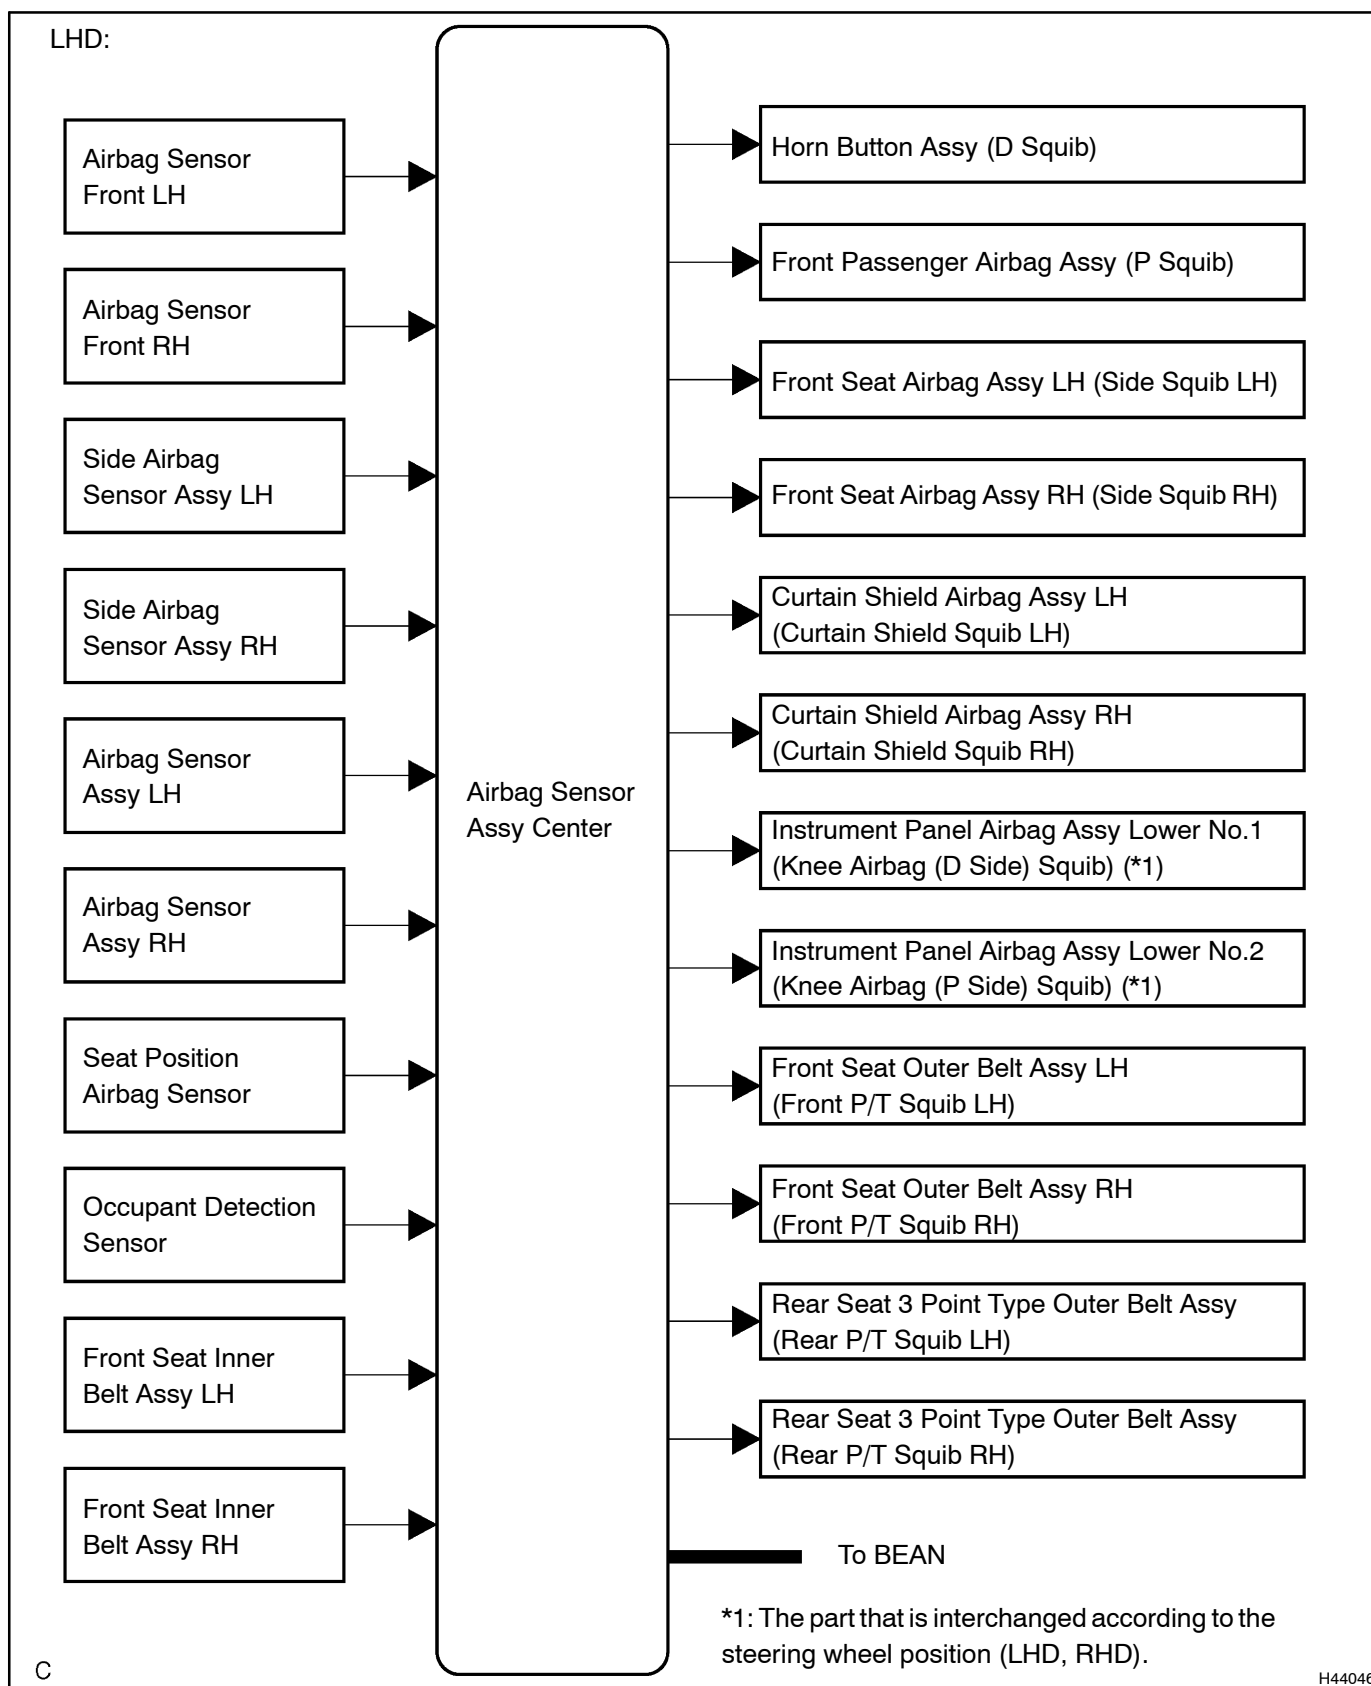

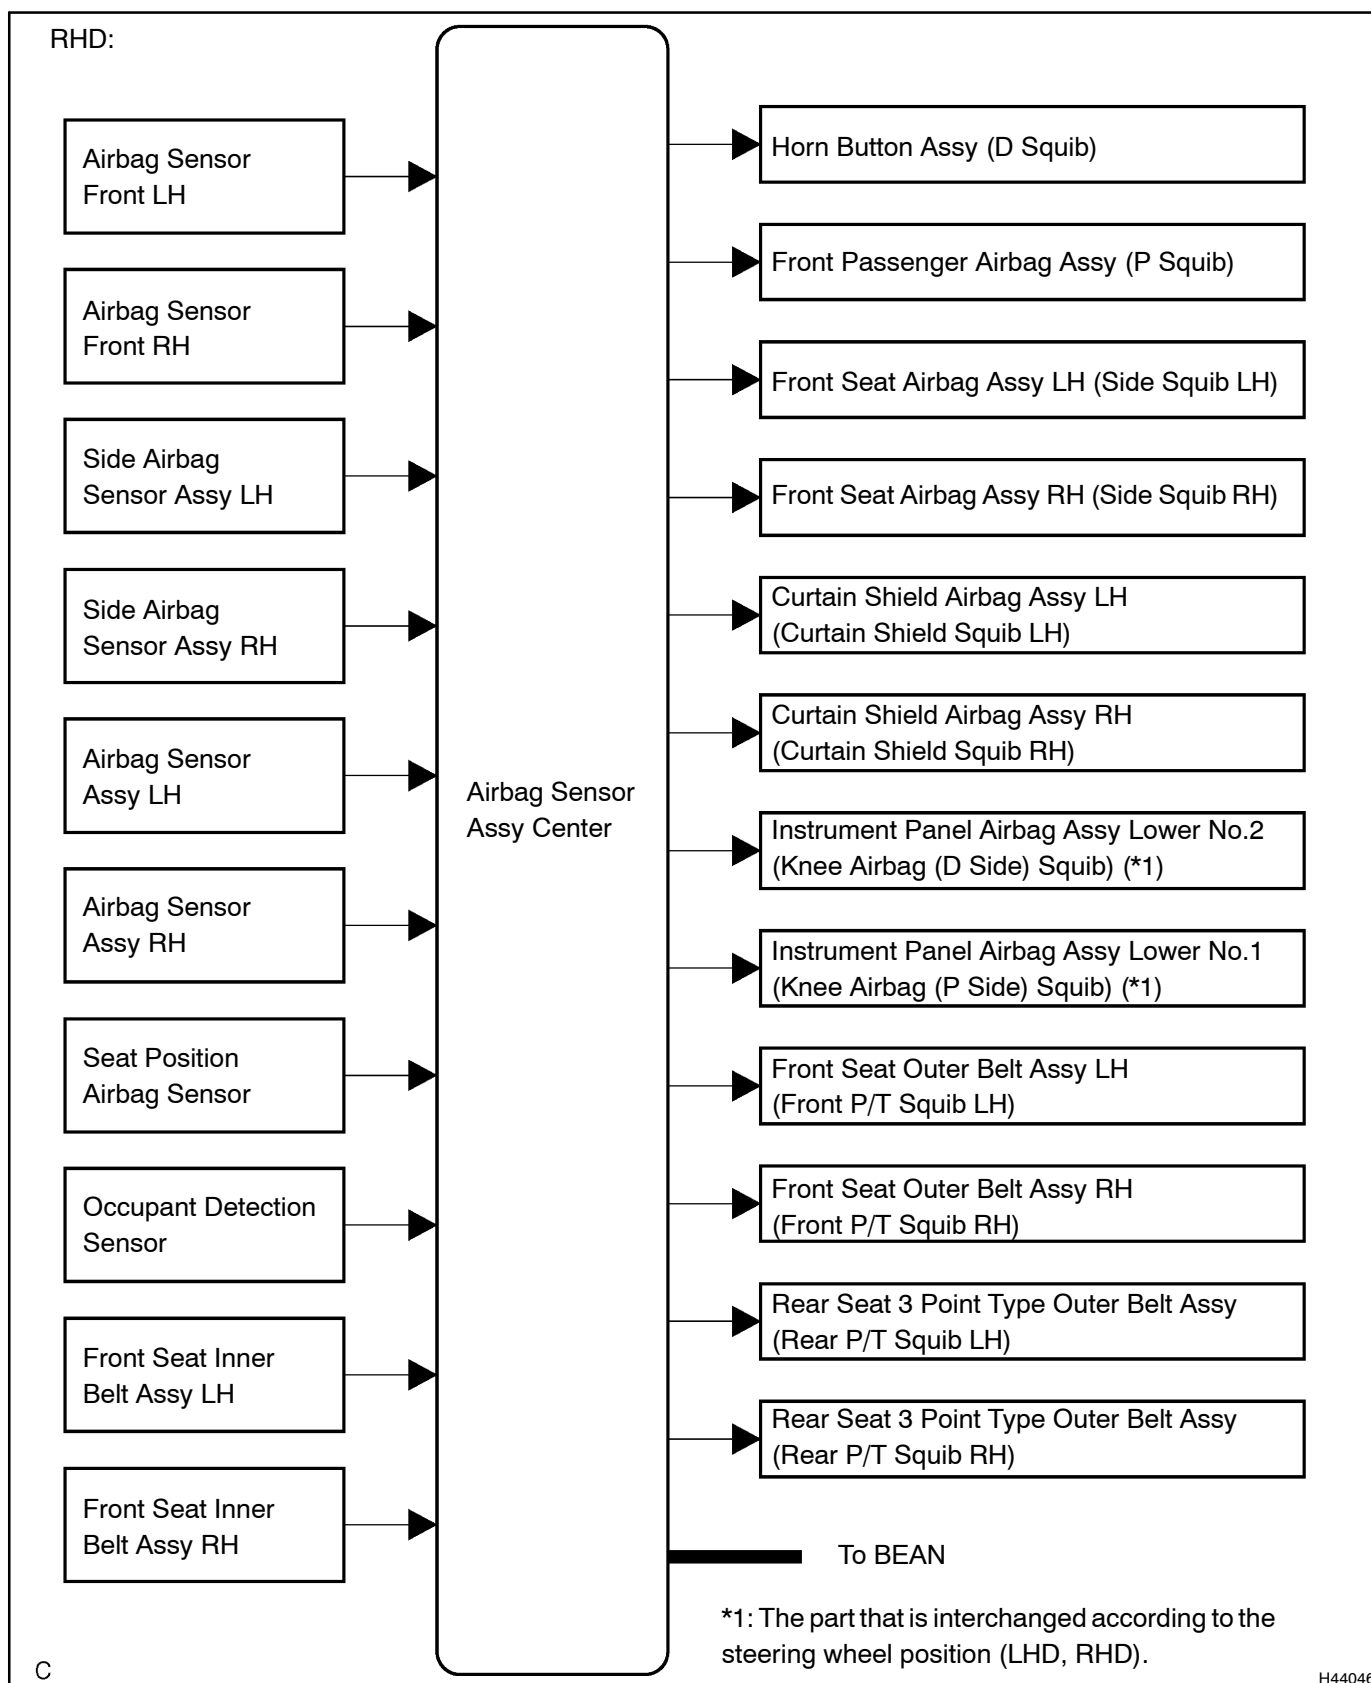

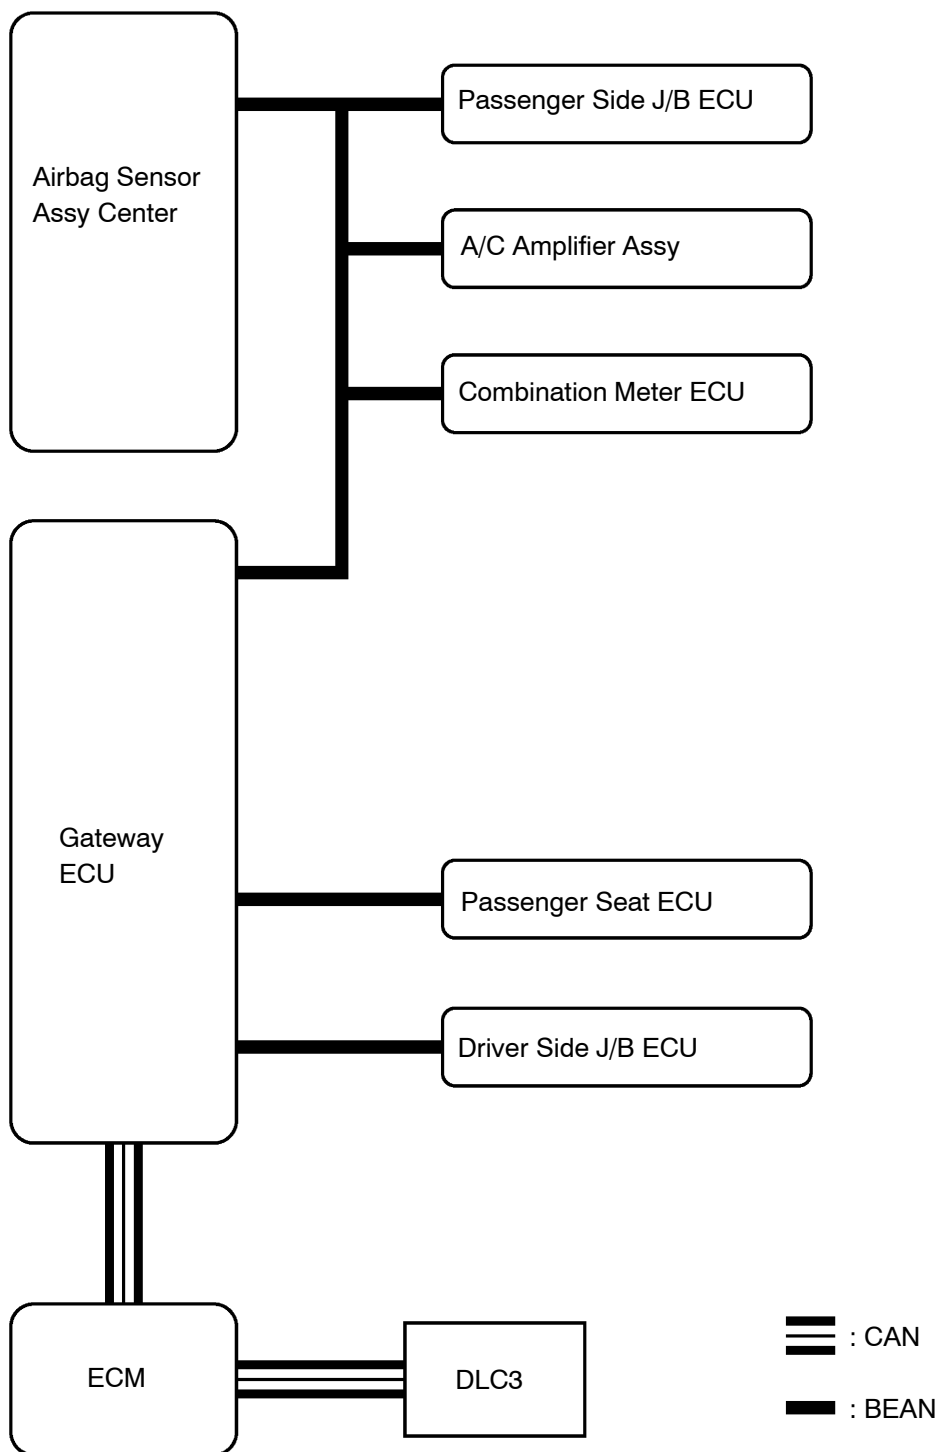

## DIAGNOSTICS – SUPPLEMENTAL RESTRAINT SYSTEM

Transmitting ECU (Transmitter)	Receiving ECU	Signals	Communication method
Airbag Sensor Assy Center	Passenger Side J/B ECU	• Passenger side buckle SW signal (Tension reducer control)	BEAN
Airbag Sensor Assy Center	A/C Amplifier Assy	• Passenger seat buckle SW signal (Swing register control)	BEAN
Airbag Sensor Assy Center	Combination Meter ECU	• A/B warning ON demand signal • Passenger seat buckle SW signal (Seat belt warning light control) • Passenger seat occupant detect signal (Seat belt warning light control) • Diagnosis signal (DTC)	BEAN
Combination Meter ECU	Airbag Sensor Assy Center	• Vehicle speed signal	BEAN
Airbag Sensor Assy Center	Passenger Seat ECU	• Passenger seat buckle SW signal (Seat control)	BEAN
Driver Side J/B ECU	Airbag Sensor Assy Center	• STP SW signal	BEAN
ECM	Airbag Sensor Assy Center	• Test mode signal • Shift position signal • Throttle opening angle information signal • E/G speed signal	BEAN – CAN
Airbag Sensor Assy Center	ECM	• Collision detection signal (Fuel cut)	BEAN – CAN