


# HEADLAMP WASHER ACTUATOR SUB-ASSY REPLACEMENT

660H1-01


## HINT:

- Use the same procedures for the RH side and LH side.
  - The procedures listed below are for the LH side.
1. **REMOVE ENGINE UNDER COVER NO.1** (SEE PAGE 76-3)
  2. **REMOVE FRONT FENDER LINER LH** (SEE PAGE 76-3)
  3. **REMOVE FRONT FENDER LINER RH** (SEE PAGE 76-3)
  4. **REMOVE FRONT BUMPER COVER** (SEE PAGE 76-3)

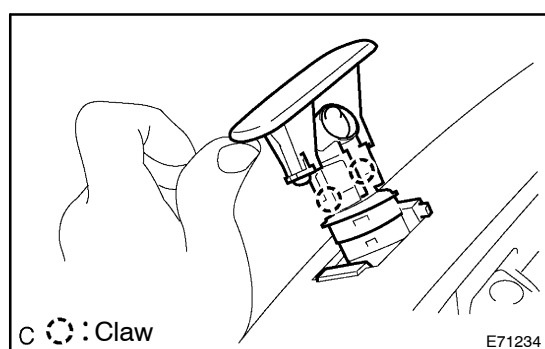


## 5. REMOVE HEADLAMP WASHER ACTUATOR SUB-ASSY LH


- (a) Pull out the headlamp cleaner washer nozzle.
- (b) Disengage the 2 claws and remove the headlamp cleaner washer nozzle.

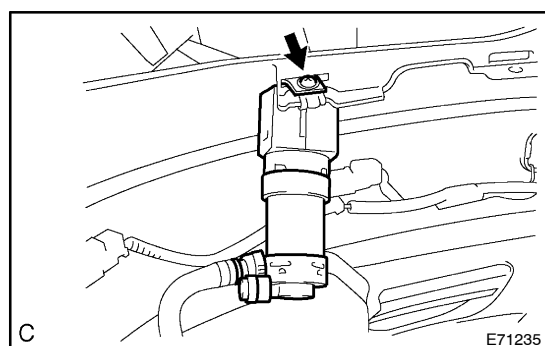

- (c) Remove the bolt.

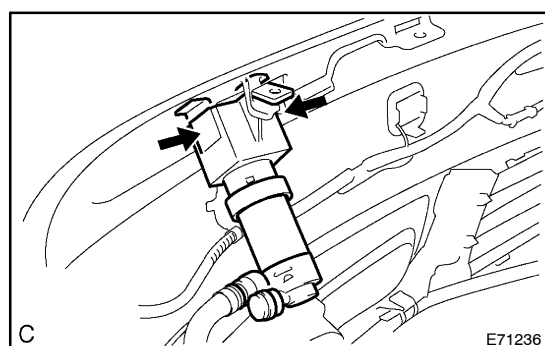

- (d) Remove the headlamp washer actuator from the front bumper cover by pushing the upper part of the headlamp washer actuator sub-assy LH.

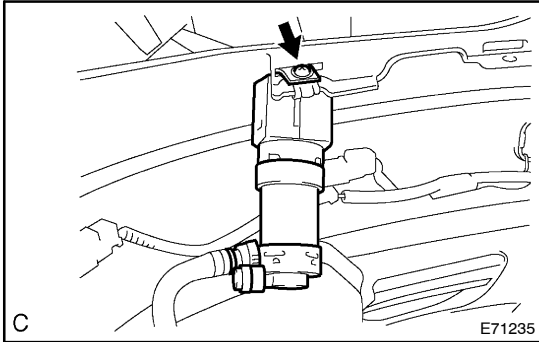**6. INSTALL HEADLAMP WASHER ACTUATOR SUB-ASSY LH**

- (a) Install the headlamp washer actuator sub-assy LH to the front bumper cover with the screws.
- (b) Install the headlamp cleaner washer nozzle and engage the 2 claws.

7. INSTALL FRONT BUMPER COVER (SEE PAGE 76-3)

8. INSTALL FRONT FENDER LINER RH (SEE PAGE 76-3)

9. INSTALL FRONT FENDER LINER LH (SEE PAGE 76-3)

10. INSTALL ENGINE UNDER COVER NO.1 (SEE PAGE 76-3)