


## FUEL PUMP RELAY INSPECTION

F10YE-01

### 1. REMOVE FUEL PUMP RELAY (Marking: FUEL PUMP)

LOCATION: In the engine compartment relay box.

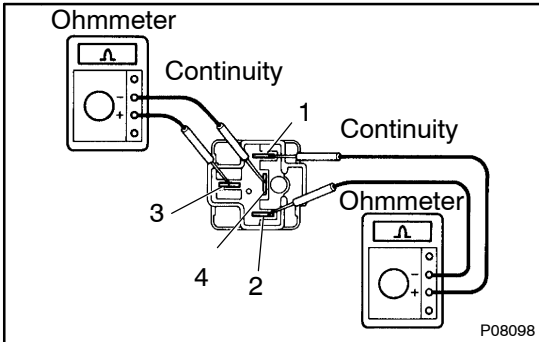


### 2. INSPECT FUEL PUMP RELAY CONTINUITY

- (a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

- (b) Check that there is continuity between terminals 3 and 4.

If there is no continuity, replace the relay.

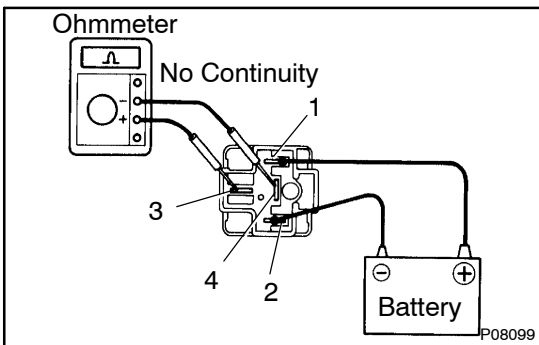

### 3. INSPECT FUEL PUMP RELAY OPERATION

- (a) Apply battery voltage across terminals 1 and 2.

- (b) Using an ohmmeter, check that there is no continuity between terminals 3 and 4.

If there is continuity, replace the relay.

### 4. REINSTALL FUEL PUMP RELAY