



INSPECTION

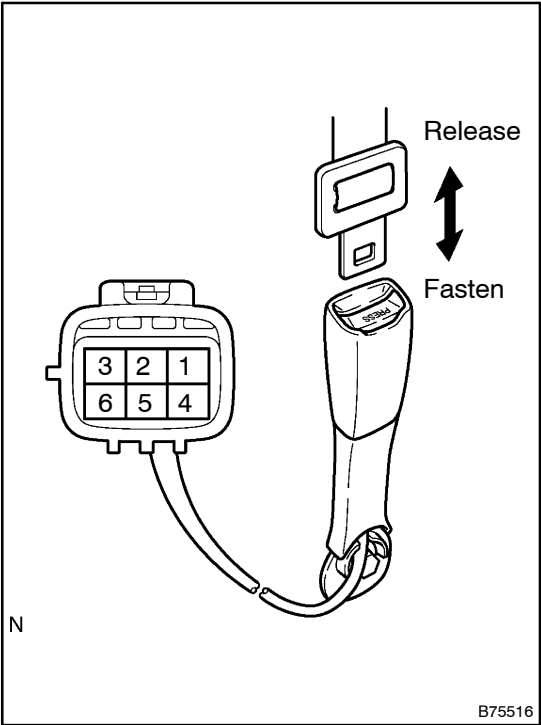

1. **Driver side:**
INSPECT FRONT SEAT INNER BELT ASSY
- (a) Measure the resistance between the terminals of the buckle switch.
- Standard:**

Tester Condition	Condition	Specified Condition
5 – 6	Fasten seat belt	Below 1 Ω
5 – 6	Release seat belt	1 M Ω or higher


If the result is not as specified, replace the inner belt assy.

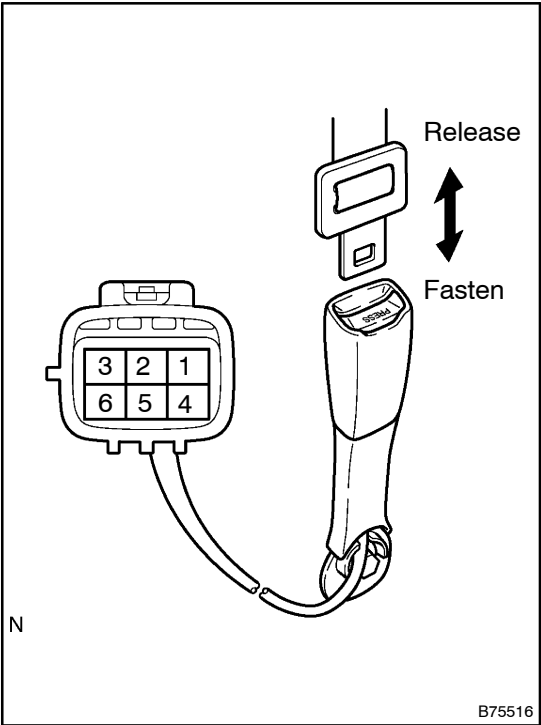

2. **Passenger side:**
INSPECT FRONT SEAT INNER BELT ASSY
- (a) Measure the resistance between the terminals of the buckle switch.
- Standard:**

Tester Condition	Condition	Specified Condition
2 – 5	Fasten seat belt	320 – 340 Ω
2 – 5	Release seat belt	1,300 – 1,360 Ω

If the result is not as specified, replace the inner belt assy.

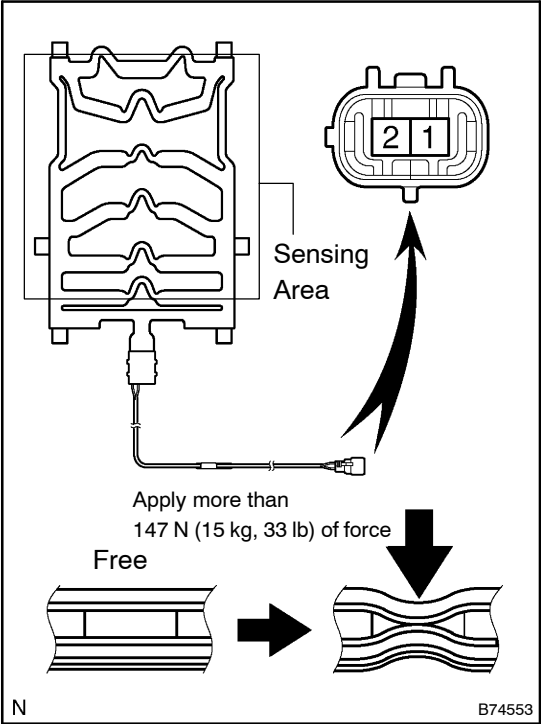

3. Passenger side only:
INSPECT OCCUPANT DETECTION SENSOR

- (a) Measure the resistance between the terminals.

Standard:

Tester Condition	Condition	Specified Condition
1 – 2	Apply more than 147 N (15 kg, 33 lb) to occupant detection sensor	Below 1 Ω
1 – 2	Free	1 M Ω or higher

If the result is not as specified, replace the seat cushion pad.