


REAR DAMPER SERVOMOTOR INSPECTION

ACSCV-01

1. REMOVE LUGGAGE COMPARTMENT FRONT COVER
(See page BO-58)

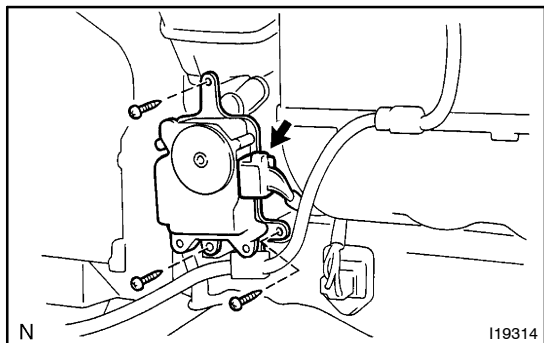

2. REMOVE REAR DAMPER SERVOMOTOR
 - (a) Disconnect the connector.
 - (b) Disconnect the magnetic valve connector clamp.
 - (c) Remove the 3 screws and servomotor.
3. INSPECT REAR DAMPER SERVOMOTOR
(See page DI-1870)
4. INSTALL REAR DAMPER SERVOMOTOR
5. INSTALL LUGGAGE COMPARTMENT FRONT COVER