

## REMOVAL

### NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is at ON position, DTCs will be recorded.
- Never use the airbag parts from another vehicle. When replacing parts, replace them with new parts.


1. **REMOVE ROOF HEADLINING** (See page BO-152)

2. **REMOVE CURTAIN SHIELD AIRBAG ASSEMBLY**

(a) Disconnect the curtain shield airbag connector.

### NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

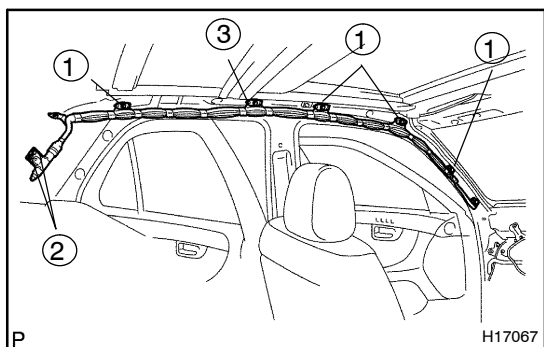

(b) In the order shown in the illustration, remove the bolts and curtain shield airbag assembly.

### HINT:

- Loosen the bolt (3) before removing the bolt (2).
- Bind the front and rear parts of the curtain shield airbag assembly before removing the bolt (3).

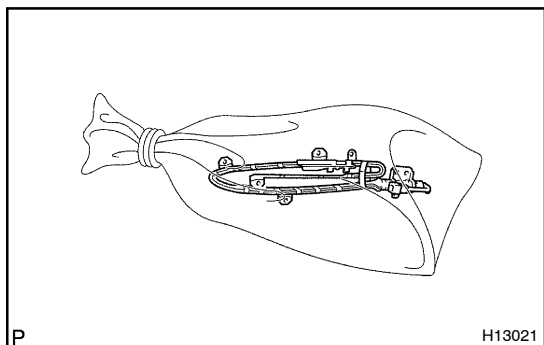

(c) Put the removed curtain shield airbag in a clear plastic bag and keep it in a safe place.

### CAUTION:

**Never disassemble the curtain shield airbag assembly.**

### NOTICE:

**aProtection bag is not reuse.**