


## FRONT WHEEL HUB BOLT REPLACEMENT


1. **REMOVE FRONT WHEEL**
2. **REMOVE BRAKE CALIPER AND DISC**
  - (a) Place matchmarks on the disc and axle hub.
  - (b) Remove the 2 bolts and brake caliper.
  - (c) Support the brake caliper securely.

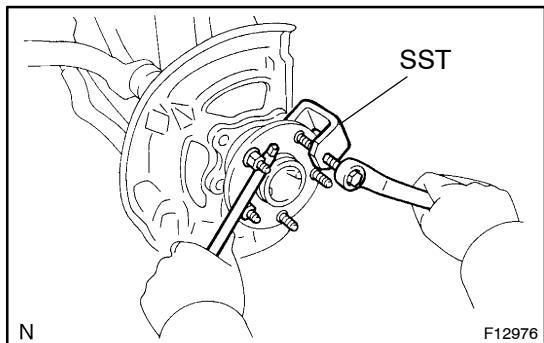

3. **REMOVE HUB BOLT**

Using SST, remove hub bolt.

SST 09628-10011

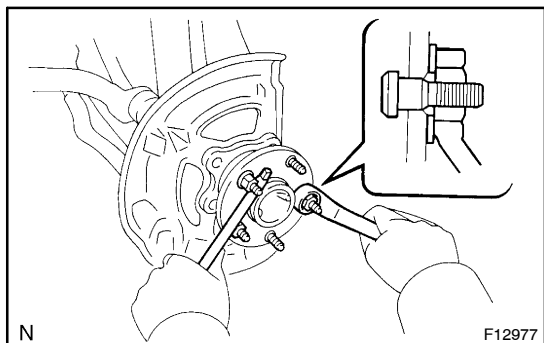

4. **INSTALL HUB BOLT**

Install washer and nut to the hub bolt as shown in the illustration, and install the hub bolt with torquing the nut.

5. **INSTALL DISC AND BRAKE CALIPER**

- (a) Align the matchmarks on the axle hub and disc.
- (b) Install the brake caliper and 2 bolts.

**Torque: 118 N·m (1,200 kgf·cm, 87 ft·lbf)**

6. **INSTALL FRONT WHEEL**

**Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)**