


ADJUSTMENT

HINT:

Since the centering bolt is used as a hood hinge and hood lock set bolt, the hood and hood lock cannot be adjusted with it on. Substitute the bolt with a washer for the centering bolt.

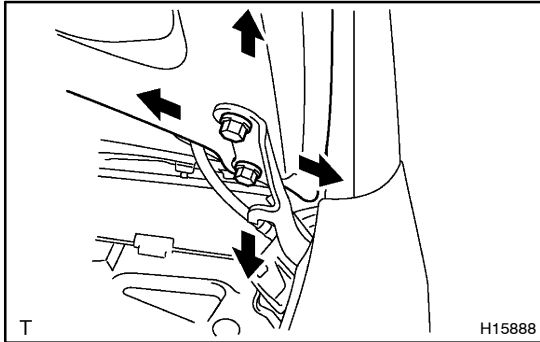

1. ADJUST HOOD IN FORWARD/REARWARD


Adjust the hood by loosening the hood side hinge bolts.

Torque: 13 N·m (135 kgf·cm, 10 ft·lbf)

2. ADJUST HOOD IN VERTICAL DIRECTIONS


- (a) Remove the bolts and increase or decrease the number of washers between the hinge and hood.
- (b) Install the bolts again.

Torque: 13 N·m (135 kgf·cm, 10 ft·lbf)

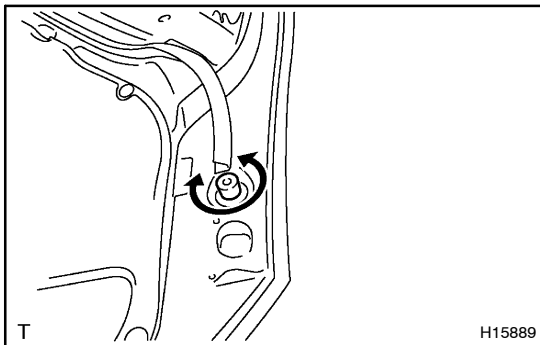

3. ADJUST FRONT EDGE OF HOOD IN VERTICAL DIRECTION

Adjust the hood by turning the cushions.

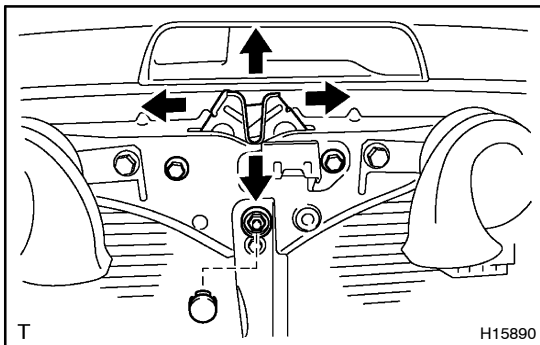

4. ADJUST HOOD LOCK

- (a) Using a screwdriver, remove the cap.

HINT:

Tape the screwdriver tip before use.

- (b) Adjust the hood lock by loosening the 2 bolts and nut.

Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)