



REMOVAL

1. REMOVE REAR SEAT CENTER ARM REST COVER

- (a) Slide the cooling box cover.

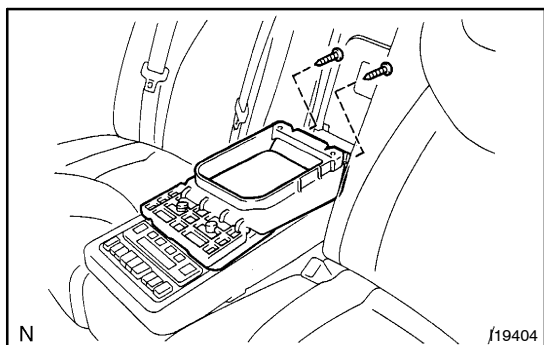

- (b) Remove the 2 screws and rear seat center arm rest cover.

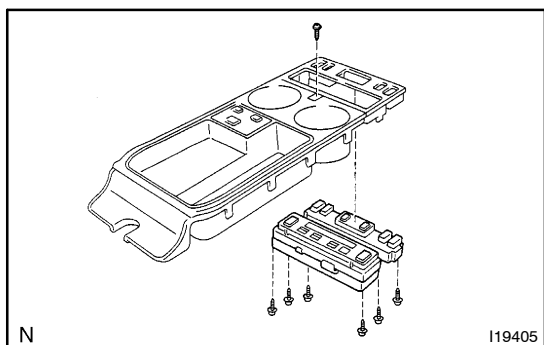

2. REMOVE REAR A/C CONTROL ASSEMBLY

- (a) Remove the screw and rear seat center arm rest plate.
- (b) Remove the 6 screws and rear A/C control assembly.