


REMOVAL

1. REMOVE WIPER ARMS

Remove the 2 nuts and wiper arms.

2. REMOVE COWL LOUVER WEATHERSTRIP

Remove the cowl louver weatherstrip from the body.

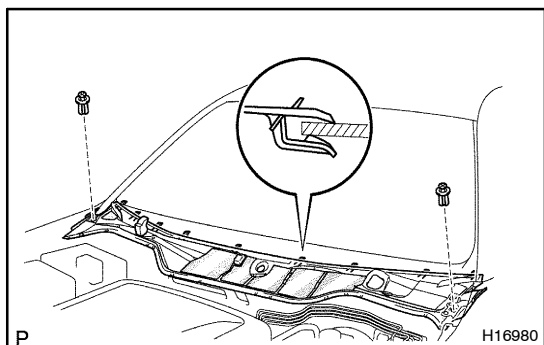


3. REMOVE COWL TOP VENTILATOR LOUVER

Remove the 2 clips cowl top ventilator louver.

HINT:

Raise up the front side of the cowl top ventilator louver to remove it.

4. REMOVE WIPER MOTOR COVER

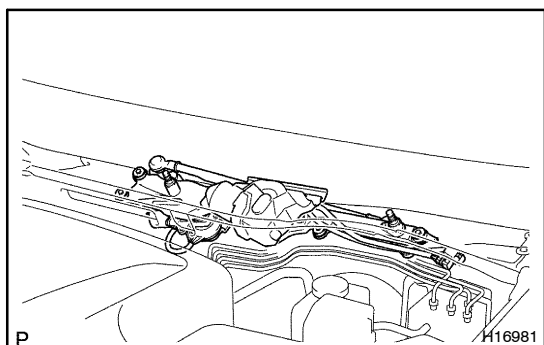

5. REMOVE WIPER MOTOR AND LINK ASSEMBLY

- (a) Remove the 4 set bolts.
- (b) Disconnect the connector.
- (c) Raise the front side of the wiper motor and link assembly up to remove it.