

ULTRASONIC SENSOR NO.2 REPLACEMENT


6714G-01

HINT:

- COMPONENTS: [SEE PAGE 76-1, 76-7.](#)
- LOCATION: [SEE PAGE 67-2.](#)
- Installation is in the reverse order of removal.


1. REMOVE FRONT BUMPER COVER ([SEE PAGE 76-3](#))

2. REMOVE REAR BUMPER COVER ([SEE PAGE 76-9](#))

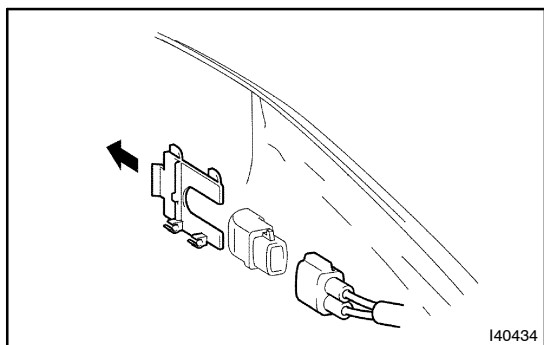

3. REMOVE ULTRASONIC SENSOR RETAINER NO.2

- (a) Disconnect the connector.
- (b) Remove the ultrasonic sensor retainer No.2 as shown in the illustration.

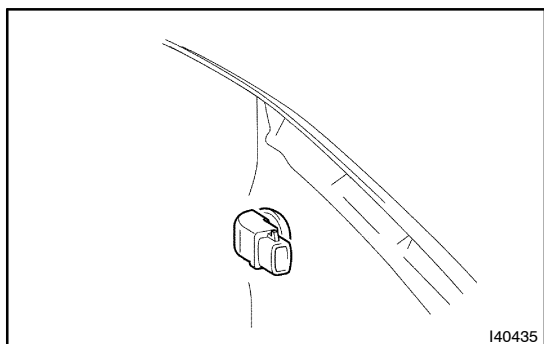

4. REMOVE ULTRASONIC SENSOR NO.2

- (a) Remove the ultrasonic sensor No.2.