


STEREO COMPONENT SPEAKER ASSY REAR

REPLACEMENT

67149-01

HINT:

- COMPONENTS: [SEE PAGE 72-12](#), [72-16](#), [70-14](#).
 - LOCATION: [SEE PAGE 67-2](#).
 - Installation is in the reverse order of removal.
1. REMOVE REAR SEAT CUSHION ASSY RH ([SEE PAGE 72-13](#), [72-19](#))
 2. REMOVE REAR SEAT CUSHION ASSY LH ([SEE PAGE 72-13](#), [72-19](#))
 3. REMOVE REAR SEAT BACK ASSY RH ([SEE PAGE 72-13](#), [72-19](#))
 4. REMOVE REAR SEAT BACK ASSY LH ([SEE PAGE 72-13](#), [72-19](#))
 5. REMOVE REAR DOOR SCUFF PLATE RH ([SEE PAGE 70-15](#))
 6. REMOVE REAR DOOR SCUFF PLATE LH ([SEE PAGE 70-15](#))
 7. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH ([SEE PAGE 70-15](#))
 8. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH ([SEE PAGE 70-15](#))
 9. REMOVE REAR SEAT SIDE COVER RH ([SEE PAGE 70-15](#))
 10. REMOVE REAR SEAT SIDE COVER LH ([SEE PAGE 70-15](#))
 11. REMOVE ROOF SIDE GARNISH INNER RH ([SEE PAGE 70-15](#))
 12. REMOVE ROOF SIDE GARNISH INNER LH ([SEE PAGE 70-15](#))
 13. REMOVE CENTER STOP LAMP ASSY ([SEE PAGE 70-15](#))
 14. REMOVE REAR SPEAKER GRILLE SUB-ASSY ([SEE PAGE 70-15](#))
 15. REMOVE PACKAGE TRAY TRIM PANEL ASSY ([SEE PAGE 70-15](#))

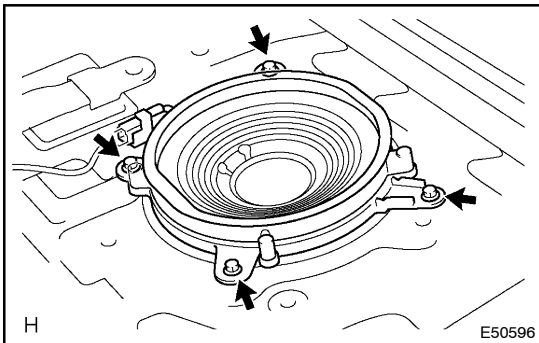

16. REMOVE STEREO COMPONENT SPEAKER ASSY REAR

- (a) Disconnect the connector.
- (b) Remove the 4 screws and stereo component speaker assy rear.