


REPLACEMENT

HINT:

- Installation is in the reverse order of removal.
 - COMPONENTS: See page 5-15.
1. RESTORE SHIP MODE SETTING (W/CD CHANGER) (SEE PAGE 67-1)
 2. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER (SEE PAGE 71-6)
 3. REMOVE PANEL INSTRUMENT CLUSTER FINISH LOWER (SEE PAGE 71-6)
 4. REMOVE RADIO RECEIVER ASSEMBLY W/BACKET (SEE PAGE 67-5)
 5. CONFIRM SHIP MODE (W/CD CHANGER) (SEE PAGE 67-1)

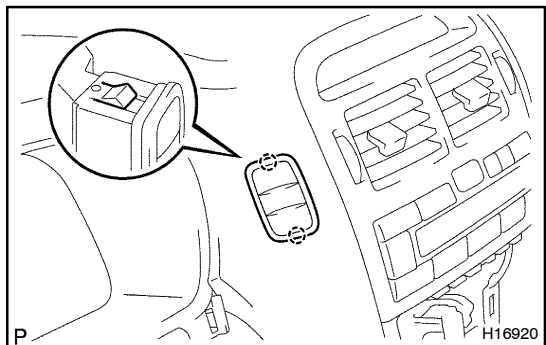


6. REMOVE TEMPERATURE CONTROL SWITCH ASSY

- (a) Using a screwdriver, release the 2 claws and remove the temperature control switch.

HINT:


Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.
- (c) Disconnect the connectors.

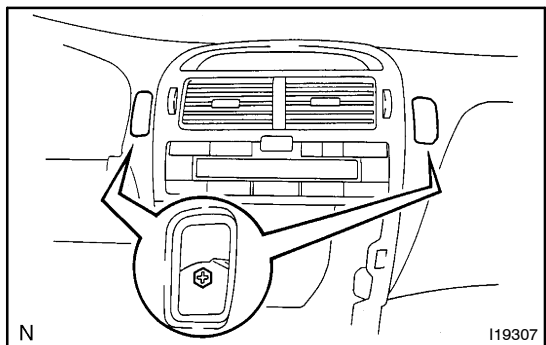


7. REMOVE INTEGRATION CONTROL & PANEL ASSY

- (a) Remove the 2 bolts.

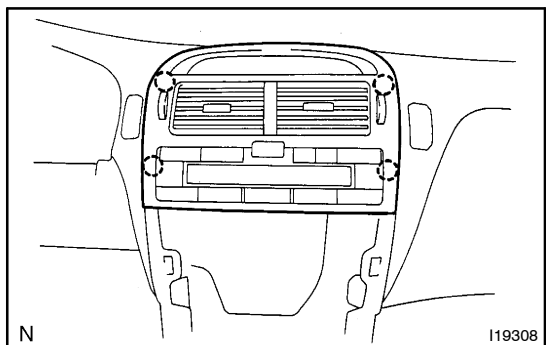


- (b) Release the 4 claws and remove the integration control & panel assy.

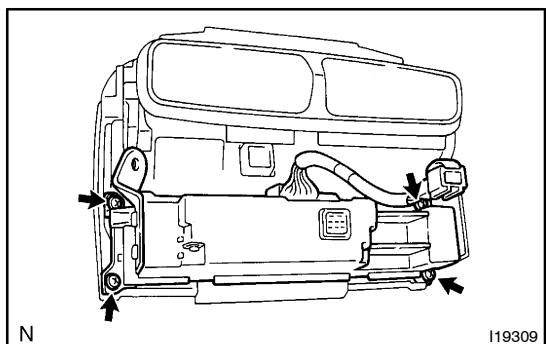


8. REMOVE HEATER CONTROL BASE BRACKET NO.1

- (a) Remove the 4 screws and 2 heater control base brackets No.1.

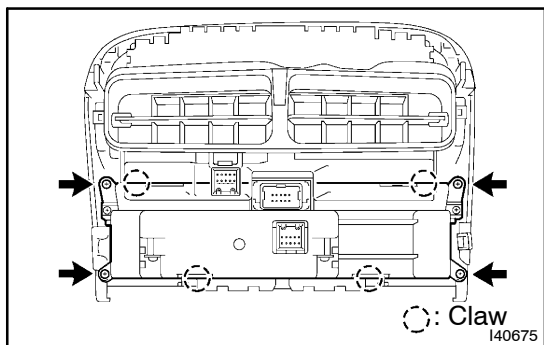


9. REMOVE AIR CONDITIONER CONTROL ASSEMBLY

- (a) Disconnect the connector.
- (b) Remove the 4 screws, release the 4 claws and remove the air conditioner control assembly.

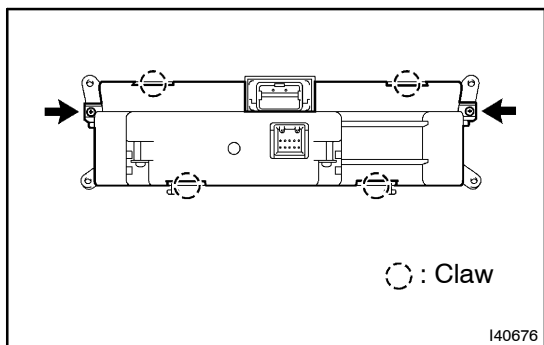


10. REMOVE HEATER CONTROL HOUSING

- (a) Remove the 2 screws, release the 4 claws and remove the heater control housing.

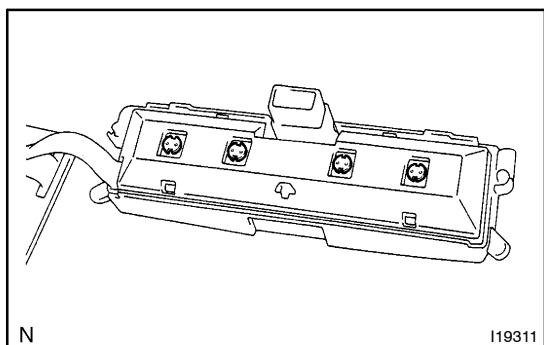

11. REMOVE HEATER CONTROL BULB

- (a) Using a screwdriver, turn the bulbs to the left and pull out the bulbs.

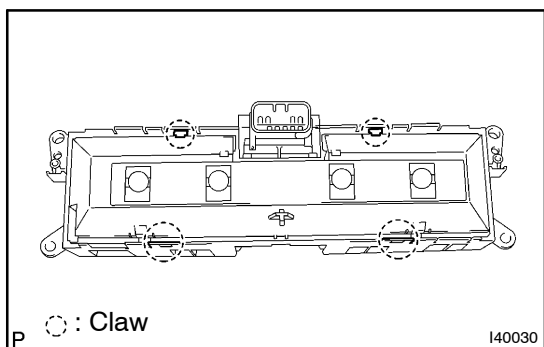

12. REMOVE HEATER CONTROL BASE SUB-ASSY

- (a) Release the 4 claws and remove the heater control base.

13. REMOVE AIR CONDITIONER PANEL SUB-ASSY