


## REPLACEMENT

### HINT:

Installation is in the reverse order of removal.

1. **PRECAUTION** (SEE PAGE 60-1)
2. **DISCONNECT BATTERY NEGATIVE TERMINAL** (SEE PAGE 60-1)
3. **REMOVE INSTRUMENT PANEL UNDER COVER SUB-ASSY NO.2** (SEE PAGE 71-6)
4. **REMOVE INSTRUMENT PANEL GARNISH SUB-ASSY RH** (SEE PAGE 71-6)
5. **REMOVE GLOVE COMPARTMENT PLATE** (SEE PAGE 71-6)
6. **REMOVE GLOVE COMPARTMENT HOLE COVER** (SEE PAGE 71-6)
7. **REMOVE GLOVE COMPARTMENT DOOR ASSY W/ INSTRUMENT PANEL AIRBAG ASSY LOWER NO.2** (SEE PAGE 71-6)
8. **REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER** (SEE PAGE 71-6)
9. **REMOVE PANEL INSTRUMENT CLUSTER FINISH LOWER** (SEE PAGE 71-6)
10. **REMOVE INSTRUMENT CLUSTER FINISH PANEL END** (SEE PAGE 71-6)
11. **REMOVE INSTRUMENT CLUSTER FINISH PANEL CENTER LOWER** (SEE PAGE 71-6)
12. **REMOVE INSTRUMENT PANEL UNDER COVER SUB-ASSY NO.1** (SEE PAGE 71-6)
13. **REMOVE COIN BOX ASSY** (SEE PAGE 71-6)
14. **REMOVE OUTER MIRROR SWITCH ASSY** (SEE PAGE 71-6)
15. **REMOVE INSTRUMENT PANEL SAFETY PAD SUB-ASSY NO.1** (SEE PAGE 71-6)
16. **REMOVE INSTRUMENT CLUSTER FINISH PANEL ASSY** (SEE PAGE 71-6)
17. **REMOVE CONSOLE BOX CARPET** (SEE PAGE 71-6)
18. **REMOVE REAR CONSOLE ARMREST ASSY** (SEE PAGE 71-6)
19. **REMOVE CONSOLE UPPER REAR PANEL SUB-ASSY** (SEE PAGE 71-6)
20. **REMOVE CONSOLE BOX** (SEE PAGE 71-6)
21. **REMOVE CONSOLE BOX DUCT NO.1** (SEE PAGE 55-21)

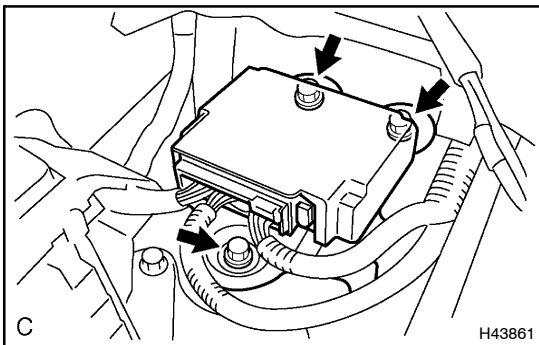

### 22. REMOVE AIR BAG SENSOR ASSY CENTER

- (a) Disconnect the holder (with connectors) from the airbag sensor assy center.
- (b) Remove the 3 bolts and the airbag sensor assy center.

### 23. INSTALL AIR BAG SENSOR ASSY CENTER

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (-) terminal is disconnected.

### CAUTION:

**After removing the terminal, wait for at least 90 seconds before starting the operation.**

- (c) Temporarily install the airbag sensor assy center with the 3 bolts.

### NOTICE:

- If the airbag sensor assy center has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
  - When installing the airbag sensor assy center, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.
- (d) Tighten the 3 bolts to the specified torque.  
**Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)**
  - (e) Connect the holder (with connectors) to the airbag sensor assy center.

- (f) Check that there is no looseness in the installation parts of the airbag sensor assy center.
- (g) Check that the water-proof sheet is properly set.

#### 24. CONNECT BATTERY NEGATIVE TERMINAL

##### NOTICE:

When disconnecting the negative (-) battery terminal, initialize the following systems after the terminal is reconnected.

System Name	See Page
Power Window Control System	01-20
Front Power Seat Control System	01-20
Back Guide Monitor System	01-20

#### 25. INSPECT SRS WARNING LIGHT (SEE PAGE 05-954)