


## WATER VALVE CONTROL SERVOMOTOR (Front A/C for LHD) INSPECTION

1. REMOVE FINISH PANEL ASSEMBLY  
(See page BO-131)
2. REMOVE BLOWER UNIT (See page AC-44)

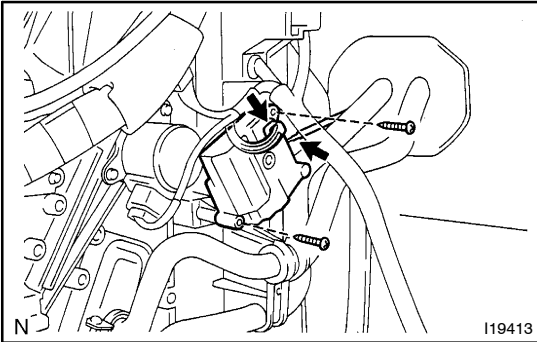

3. REMOVE WATER VALVE CONTROL SERVOMOTOR
  - (a) Disconnect the connector.
  - (b) Disconnect the control cable.
  - (c) Remove the 2 screws and servomotor.
4. INSPECT WATER VALVE CONTROL SERVOMOTOR CIRCUIT (See page DI-1336)
5. INSTALL WATER VALVE CONTROL SERVOMOTOR