


IGNITION SWITCH AND KEY UNLOCK WARNING SWITCH LOCATION

BE0BA-04

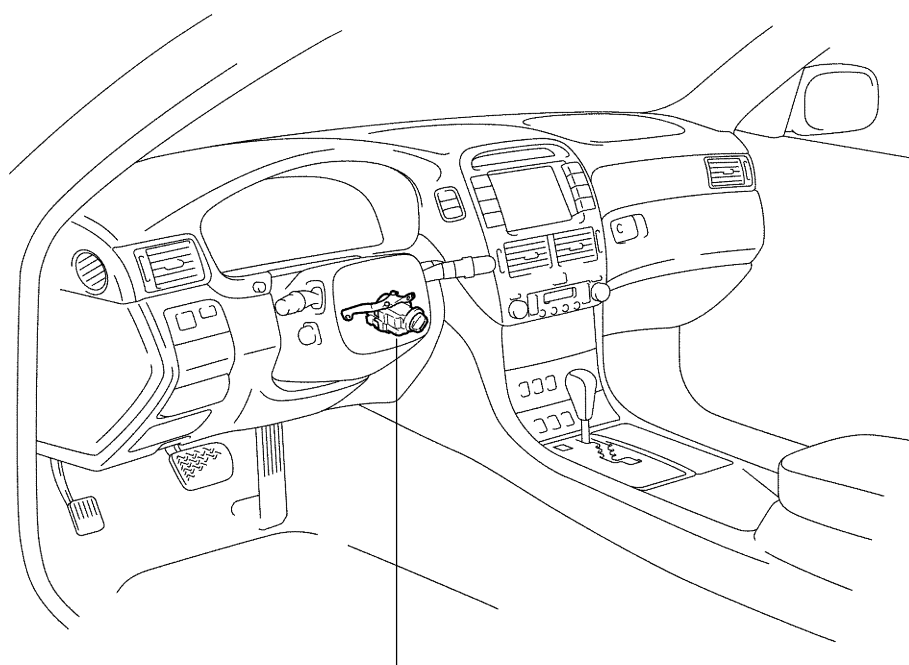

Ignition Switch

• Key Unlock Warning Switch