


REPLACEMENT

1. REMOVE ENGINE UNDER COVER NO.1 (See page 14-26)

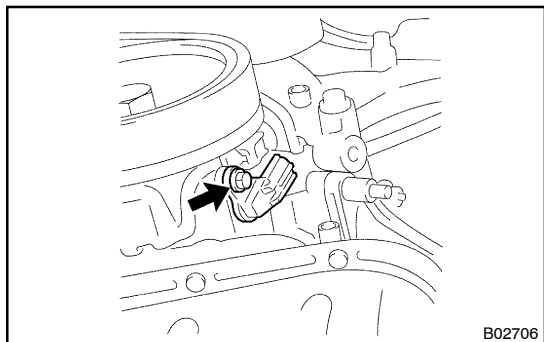

2. REMOVE CRANKSHAFT POSITION SENSOR

- (a) Disconnect the sensor connector.
- (b) Remove the bolt and sensor.

3. INSTALL CRANKSHAFT POSITION SENSOR

- (a) Install a new sensor with the bolt.
Torque: 6.5 N·m (65 kgf·cm, 58 in.·lbf)
- (b) Connect the sensor connector.

4. INSTALL ENGINE UNDER COVER NO.1 (See page 14-26)