


GYRO ERROR

INSPECTION PROCEDURE

1 NAVIGATION CHECK MODE (VEHICLE SENSORS)

(a) Enter the "Navigation Check" mode (Vehicle Sensors) (see page 05-1757).

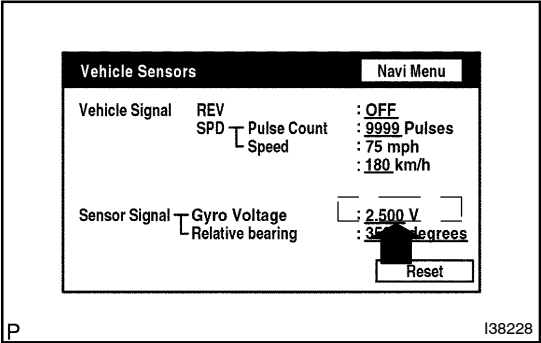

(b) Check the gyro voltage.
Standard: 0.1 to 4.5 V

NG → REPLACE NAVIGATION ECU (SEE PAGE 67-9)

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN DIAGNOSTIC TROUBLE CODE CHART (SEE PAGE 05-1788)