


BLOWER RESISTOR (for Rear A/C) INSPECTION

ACSCR-01

1. REMOVE LUGGAGE COMPARTMENT FRONT COVER

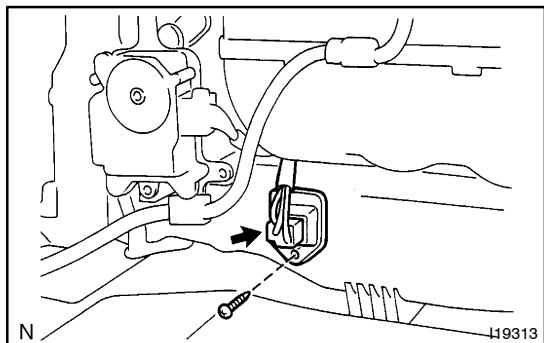

2. REMOVE BLOWER RESISTOR

(a) Disconnect the connector.

(b) Remove the screw and blower resistor.

3. INSPECT BLOWER RESISTOR (See page DI-1852)

4. INSTALL BLOWER RESISTOR

5. INSTALL LUGGAGE COMPARTMENT FRONT COVER