


TELEVISION CAMERA ECU REPLACEMENT

67145-01

HINT:

- COMPONENTS: [SEE PAGE 75-44.](#)
 - LOCATION: [SEE PAGE 67-2.](#)
 - Installation is in the reverse order of removal.
1. REMOVE LUGGAGE COMPARTMENT FLOOR MAT ([SEE PAGE 75-47](#))
 2. REMOVE DECK TRIM SIDE BOARD RH ([SEE PAGE 75-47](#))
 3. REMOVE REAR FLOOR FINISH PLATE ([SEE PAGE 75-47](#))
 4. SEPARATE LUGGAGE COMPARTMENT TRIM COVER FRONT ([SEE PAGE 75-47](#))
 5. REMOVE LUGGAGE COMPARTMENT TRIM COVER ASSY RH ([SEE PAGE 75-47](#))

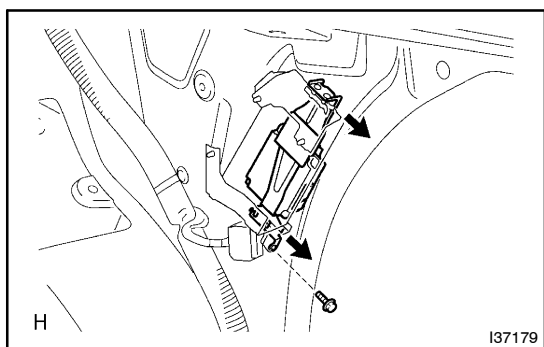

6. REMOVE TELEVISION CAMERA ECU

- (a) Disconnect the connector and remove the bolt.
- (b) Pull out the television camera ECU along the stereo component amplifier Assy guide toward the rear of the vehicle to remove it.

If the television camera ECU is not easily removed due to a lack of space between the television camera ECU and the vehicle, remove the television camera ECU together with the stereo component amplifier Assy ([see page 67-16](#)).

7. INSTALL TELEVISION CAMERA ECU

- (a) Install the television camera ECU by aligning it with the stereo component amplifier Assy guide, and tighten the bolt.
- (b) Connect the connector.

HINT:

After the replacement, perform the screen noise automatic adjustment when screen noise occurs ([see page 05-1806](#)).

8. ADJUST STEERING ANGLE (W/BACK GUIDE MONITOR SYSTEM) ([SEE PAGE 05-1914](#))
9. ADJUST CAMERA POSITION (W/BACK GUIDE MONITOR SYSTEM) ([SEE PAGE 05-1914](#))