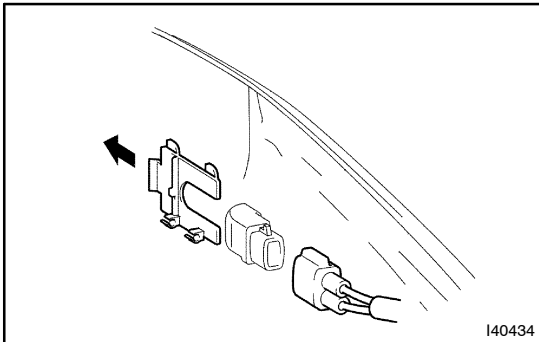


# ULTRASONIC SENSOR NO.1 REPLACEMENT


6714F-01

**HINT:**

- COMPONENTS: [SEE PAGE 76-1, 76-7.](#)
- LOCATION: [SEE PAGE 67-2.](#)
- Installation is in the reverse order of removal.

**1. REMOVE FRONT BUMPER COVER ([SEE PAGE 76-3](#))****2. REMOVE REAR BUMPER COVER ([SEE PAGE 76-9](#))****3. REMOVE ULTRASONIC SENSOR RETAINER NO.1**

- (a) Disconnect the connector.
- (b) Remove the ultrasonic sensor retainer No.1 as shown in the illustration.

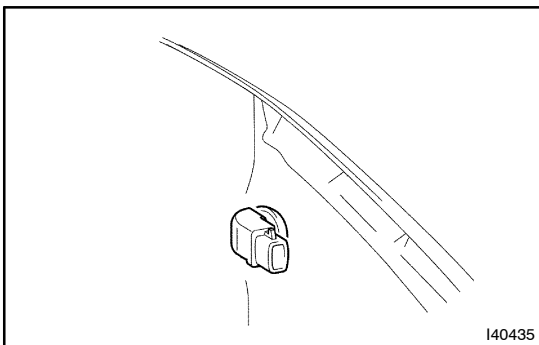**4. REMOVE ULTRASONIC SENSOR NO.1**

- (a) Remove the ultrasonic sensor No.1.