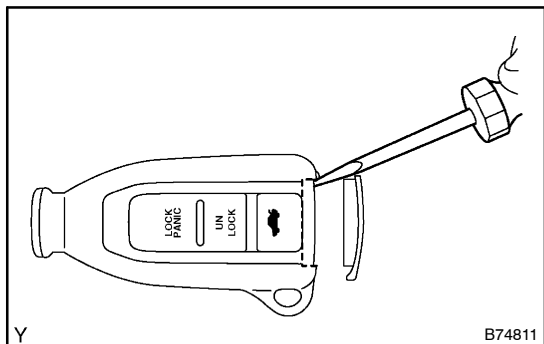


REPLACEMENT

NOTICE:


Take extra care when handling these precision electronic components.

**1. REMOVE TRANSMITTER BATTERY**


- (a) Using a screwdriver, pry up the outer cover.

NOTICE:

Do not forcibly pry up the cover.

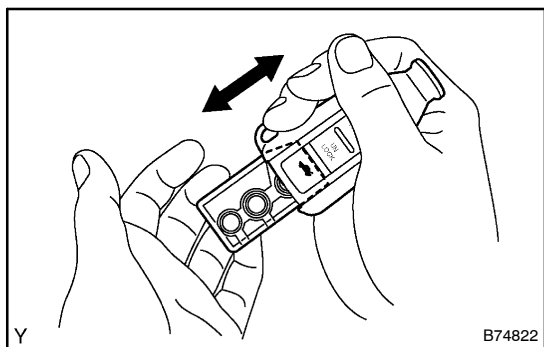

- (b) Lightly shake the key to take out the transmitter as shown in the illustration.

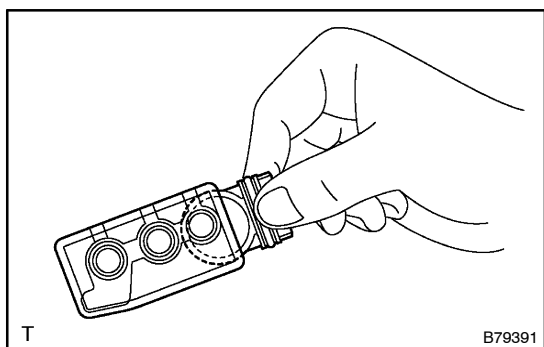

- (c) Remove the battery holder.
(d) Remove the battery (lithium battery) from the battery holder.

NOTICE:

- Do not push the terminals with your finger.
- Fully insert the holder into the transmitter.

2. INSTALL TRANSMITTER BATTERY

- (a) Install a new battery (lithium battery) with the positive (+) side up.

NOTICE:

- Be sure that the positive side and the negative side of the transmitter battery are matched up correctly.
 - Be careful not to bend the transmitter battery electrode during insertion.
 - Keep the transmitter case interior free of dust and oil.
- (b) Install the outer cover.