


OVERHAUL

HINT:


- Installation is in the reverse order of removal.
 - COMPONENTS: [See page 5-29.](#)
1. **DISCONNECT NEGATIVE TERMINAL CABLE FROM BATTERY**
 2. **REMOVE FRONT DOOR SCUFF PLATE LH (SEE PAGE 71-6)**
 3. **REMOVE FRONT PILLAR GARNISH LH (SEE PAGE 71-6)**
 4. **REMOVE INSTRUMENT PANEL UNDER COVER SUB-ASSY NO.2 (SEE PAGE 71-6)**
 5. **REMOVE INSTRUMENT PANEL GARNISH SUB-ASSY RH (SEE PAGE 71-6)**
 6. **REMOVE GLOVE COMPARTMENT DOOR ASSY W/ INSTRUMENT PANEL AIRBAG ASSY LOWER NO.2 (SEE PAGE 71-6)**
 7. **REMOVE AIR SUSPENSION AND HEADLIGHT BEAM LEVEL CONTROL ECU**
 - (a) Disconnect the connectors.
 - (b) Remove the 2 nuts and air suspension and headlight beam level control ECU.

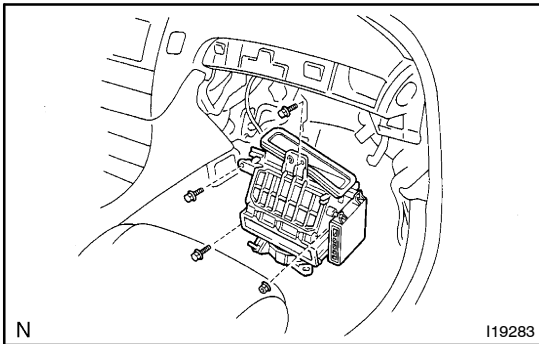

8. REMOVE BLOWER ASSY


- (a) Disconnect the connectors.
- (b) Remove the nut and 3 bolts.
- (c) Remove the blower assy.

9. **REMOVE CLEAN AIR FILTER SUB-ASSY**
10. **REMOVE CLEAN AIR FILTER**

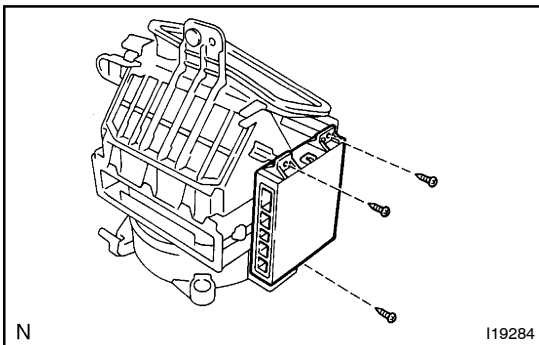

11. REMOVE AIR CONDITIONING AMPLIFIER ASSY

- (a) Remove the 3 screws and air conditioning amplifier assy.

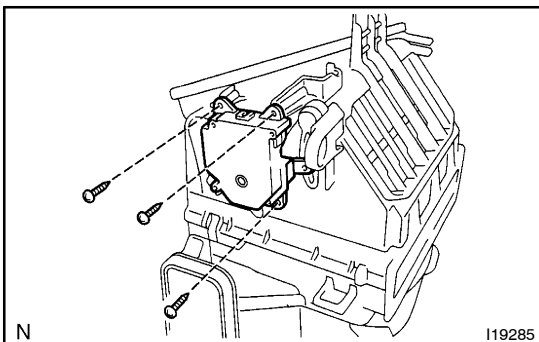

12. REMOVE AIR INLET SERVOMOTOR

- (a) Remove the 3 screws and the air inlet servomotor.

13. REMOVE BLOWER MOTOR ASSY (COOLING UNIT MOTOR SUB-ASSY W/FAN)

- (a) Remove the 3 screws and blower motor assy (cooling unit motor sub-assy w/fan).