


# LASER SENSOR REPLACEMENT

8204J-01

1. SEPARATE BATTERY NEGATIVE TERMINAL
2. REMOVE ENGINE UNDER COVER NO.1 (SEE PAGE 76-3)
3. REMOVE FRONT WHEEL OPENING EXTENSION PAD LH (SEE PAGE 76-3)
4. REMOVE FRONT FENDER LINER LH (SEE PAGE 76-3)
5. REMOVE FRONT WHEEL OPENING EXTENSION PAD RH (SEE PAGE 76-3)
6. REMOVE FRONT FENDER LINER RH (SEE PAGE 76-3)
7. REMOVE FRONT BUMPER COVER (SEE PAGE 76-3)
8. REMOVE FRONT BUMPER REINFORCEMENT SUB-ASSY (SEE PAGE 76-3)

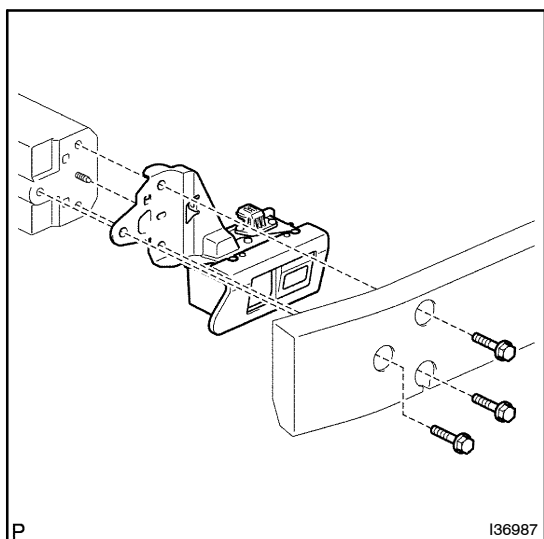

## 9. REMOVE LASER SENSOR

- (a) Disconnect the connector and remove the laser sensor.

## 10. INSTALL LASER SENSOR

### NOTICE:

Do not install the laser radar sensor if it has been damaged or if it has received some sort of shock.

11. INSTALL FRONT BUMPER REINFORCEMENT SUB-ASSY (SEE PAGE 76-3)
12. ADJUST FOG LIGHT AIM (SEE PAGE 65-19)
13. CHECK FOG LIGHT AIM
14. ADJUST LASER SENSOR (SEE PAGE 82-4)