


## E ELECTRICAL WIRING ROUTING

### Position of Parts in Seat

[LHD : Front Seat]

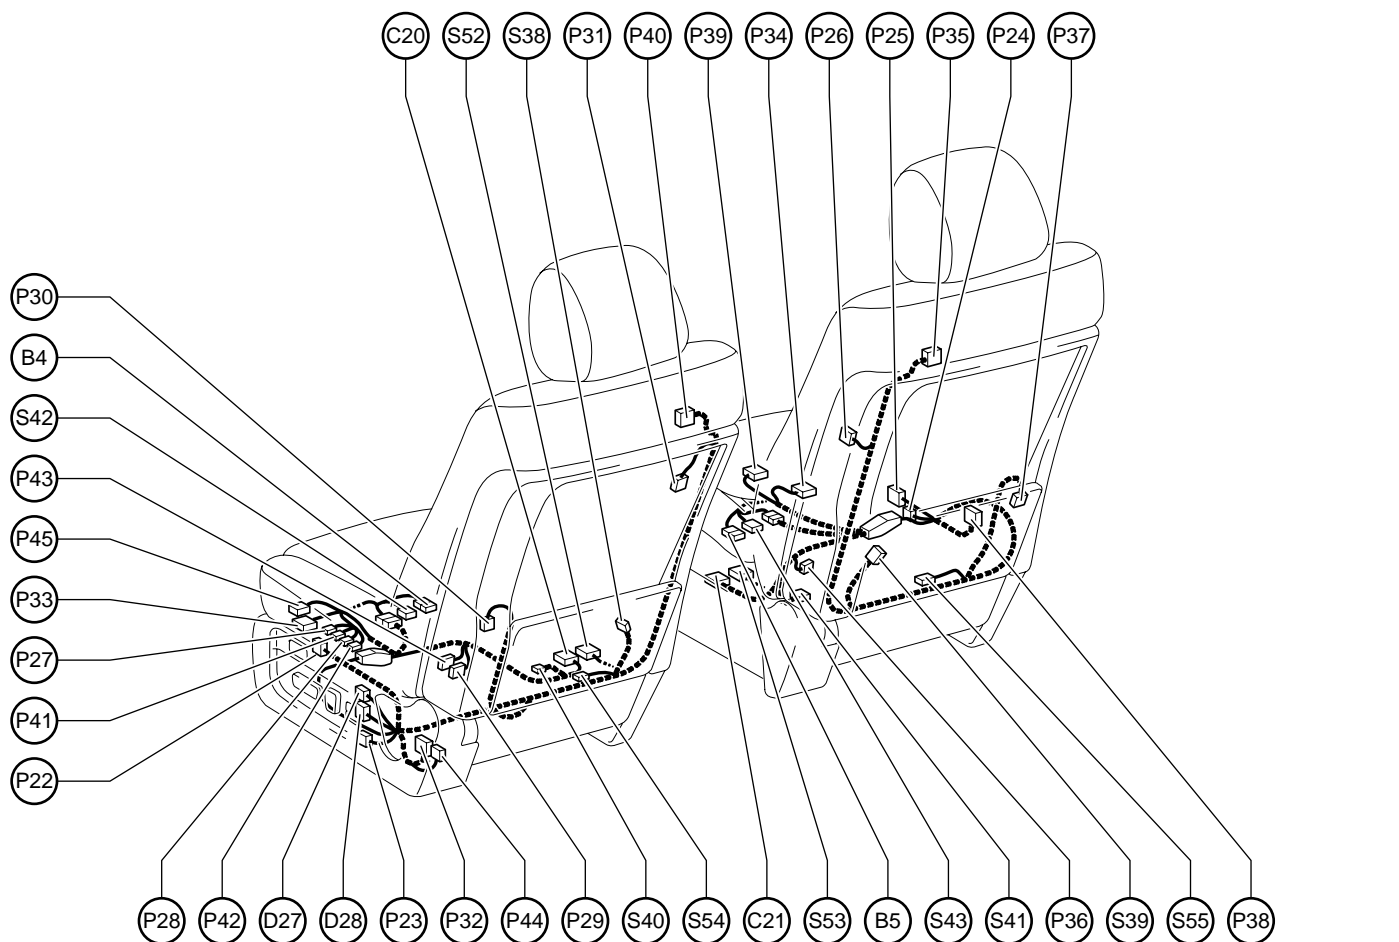

B 4 Buckle SW Front LH  
B 5 Buckle SW Front RH

C20 Climate Control Seat ECU (Driver's Seat)  
C21 Climate Control Seat ECU (Front Passenger's Seat)

D27 Driver Seat ECU  
D28 Driver Seat ECU

P22 Power Seat Control SW (Driver's Seat Cushion)  
P23 Power Seat Control SW (Driver's Seat Lumbar Support)  
P24 Power Seat Control SW (Front Passenger's Seat Lumbar Support)  
P25 Power Seat Control SW (Front Passenger's Seat)  
P26 Power Seat Control SW Sub (Front Passenger's Seat)  
P27 Power Seat Motor (Driver's Seat Cushion Control)  
P28 Power Seat Motor (Driver's Seat Front Vertical Control)  
P29 Power Seat Motor (Driver's Seat Lifter Control)  
P30 Power Seat Motor (Driver's Seat Lumbar Support Lower Side Control)  
P31 Power Seat Motor (Driver's Seat Lumbar Support Upper Side Control)  
P32 Power Seat Motor (Driver's Seat Reclining Control)  
P33 Power Seat Motor (Driver's Seat Slide Control)  
P34 Power Seat Motor (Front Passenger's Seat Front Vertical Control)  
P35 Power Seat Motor (Front Passenger's Seat Head Rest Control)  
P36 Power Seat Motor (Front Passenger's Seat Lifter Control)

P37 Power Seat Motor (Front Passenger's Seat Lumbar Support Control)  
P38 Power Seat Motor (Front Passenger's Seat Reclining Control)  
P39 Power Seat Motor (Front Passenger's Seat Slide Control)  
P40 Power Seat Motor and Position Sensor (Driver's Seat Head Rest Control)  
P41 Power Seat Position Sensor (Driver's Seat Cushion Control)  
P42 Power Seat Position Sensor (Driver's Seat Front Vertical Control)  
P43 Power Seat Position Sensor (Driver's Seat Lifter Control)  
P44 Power Seat Position Sensor (Driver's Seat Reclining Control)  
P45 Power Seat Position Sensor (Driver's Seat Slide Control)  
S38 Seat Climate Controller Front LH (Seat Back)  
S39 Seat Climate Controller Front RH (Seat Back)  
S40 Seat Heater Front LH  
S41 Seat Heater Front RH  
S42 Side Airbag Squib LH  
S43 Side Airbag Squib RH  
S52 Seat Climate Controller Front LH (Seat Cushion)  
S53 Seat Climate Controller Front RH (Seat Cushion)  
S54 Step Light Rear LH  
S55 Step Light Rear RH