


POWER STEERING ECU ASSY (LHD)

510GN-01

REPLACEMENT


1. PRECAUTION (SEE PAGE 05-938)
2. DISCONNECT BATTERY NEGATIVE TERMINAL
3. REMOVE INSTRUMENT PANEL UNDER COVER SUB-ASSY NO.2 (SEE PAGE 71-6)
4. REMOVE INSTRUMENT PANEL GARNISH SUB-ASSY LH (SEE PAGE 71-6)
5. REMOVE GLOVE COMPARTMENT PLATE (SEE PAGE 71-6)
6. REMOVE CHOKE KNOB HOLE COVER (SEE PAGE 71-6)
7. REMOVE GLOVE COMPARTMENT DOOR ASSY W/INSTRUMENT PANEL AIRBAG ASSY LOWER NO.2 (SEE PAGE 71-6)

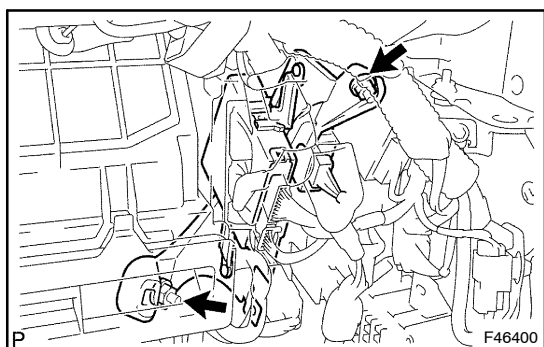


8. REMOVE POWER STEERING ECU ASSY

- (a) Disconnect the power steering ECU connector and headlamp swivel ECU connector.
- (b) Remove the 2 nuts.
- (c) Remove the power steering ECU with the bracket and headlamp swivel ECU.

If necessary, disconnect the connectors placed around the power steering ECU and headlamp swivel ECU.

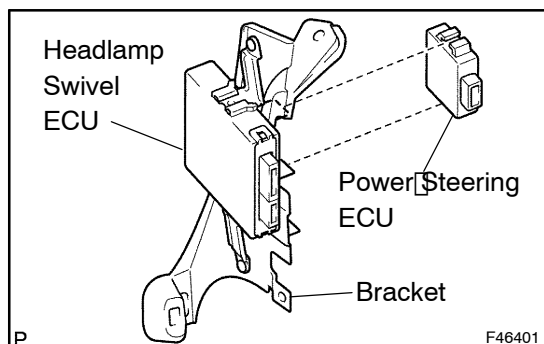


- (d) Remove the power steering ECU from the bracket.

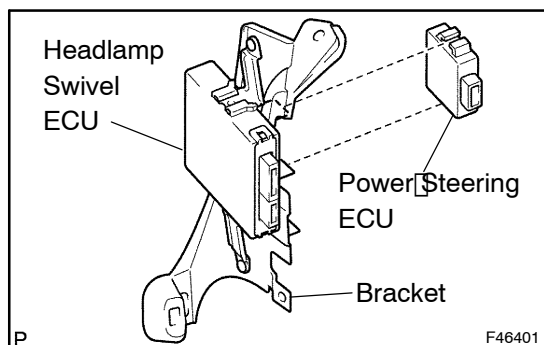

9. INSTALL POWER STEERING ECU ASSY

(a) Install the power steering ECU to the bracket.

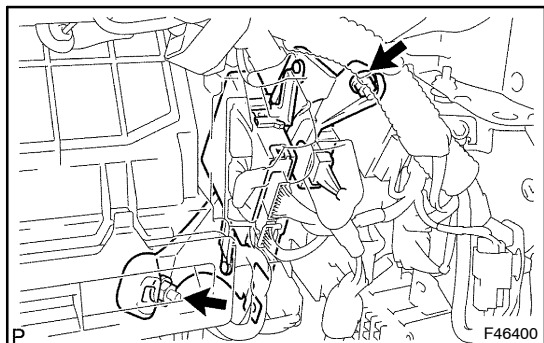

(b) Install the power steering ECU with the bracket and headlamp swivel ECU.

(c) Tighten the 2 nuts.

Torque: 5.5 N·m (56 kgf·cm, 48 in. lbf)

(d) Connect the power steering ECU connector and headlamp swivel ECU connector.

If you disconnect the connectors placed around the power steering ECU and headlamp swivel ECU in step 8, reconnect them.

10. INSTALL GLOVE COMPARTMENT DOOR ASSY W/ INSTRUMENT PANEL AIRBAG ASSY LOWER NO.2 (SEE PAGE 71-6)

11. INSTALL CHOKE KNOB HOLE COVER (SEE PAGE 71-6)

12. INSTALL GLOVE COMPARTMENT PLATE (SEE PAGE 71-6)

13. INSTALL INSTRUMENT PANEL GARNISH SUB-ASSY LH (SEE PAGE 71-6)

14. INSTALL INSTRUMENT PANEL UNDER COVER SUB-ASSY NO.2 (SEE PAGE 71-6)

15. CONNECT BATTERY NEGATIVE TERMINAL

16. PERFORM INITIALIZATION (SEE PAGE 51-1)

17. INSPECT SRS WARNING LIGHT (SEE PAGE 05-954)