


RELAY INSPECTION

AC3D6-01

1. MAGNETIC CLUTCH RELAY


- (a) Remove the magnetic clutch relay from engine room No.1 R/B.

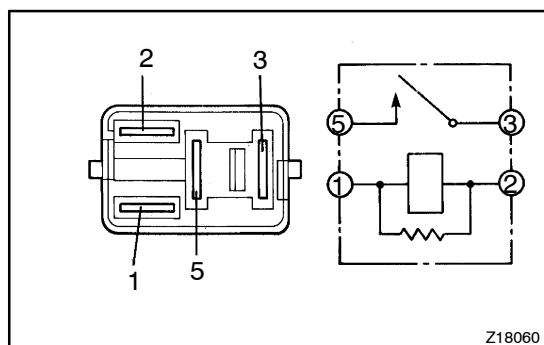

- (b) Inspect magnetic clutch relay continuity.


Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
Apply B+ between terminals 1 and 2.	3 - 5	Continuity

If continuity is not as specified, replace the relay.

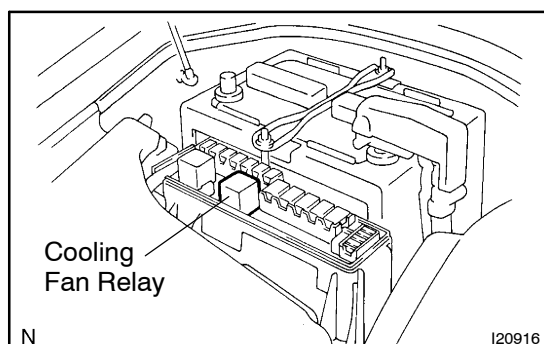

2. COOLING FAN RELAY

- (a) Remove the cooling fan relay from fusible link block.

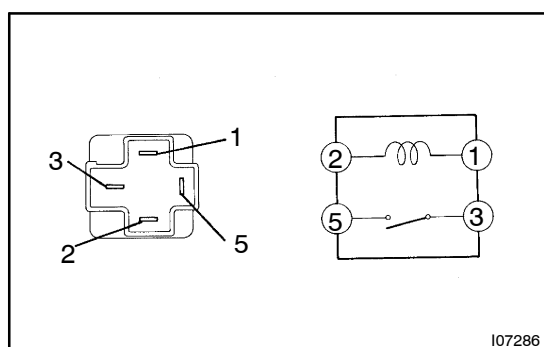

- (b) Inspect cooling fan relay continuity.

Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
Apply B+ between terminals 3 and 5.	3 - 5	Continuity

If continuity is not as specified, replace the relays.