


DTC CHECK/CLEAR

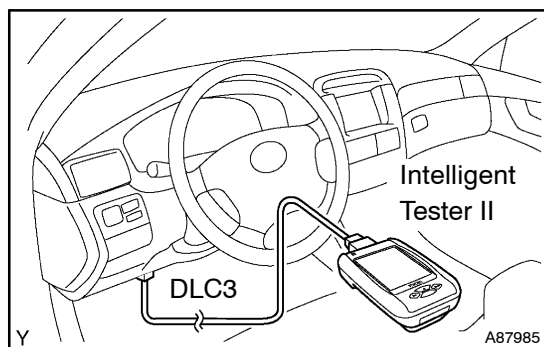

1. CHECK DTC

- (a) Connect the tester to the DLC3.
- (b) Turn the ignition switch ON.
- (c) Read DTCs by following the prompts on the tester screen.

HINT:

Refer to the tester operator's manual for further details.

2. CLEAR DTC

- (a) Connect the tester to the DLC3.
- (b) Turn the ignition switch ON.
- (c) Erase the DTCs following the prompts on the tester screen.

HINT:

Refer to the tester operator's manual for further details.