


OVERHAUL

HINT:

The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.

1. **DRAIN ENGINE COOLANT FROM RADIATOR** (See page 6-8)
2. **REMOVE AIR CLEANER INLET NO.1** (See page 4-26)
3. **REMOVE AIR CLEANER ASSY** (See page 4-26)
4. **DISCONNECT RADIATOR HOSE NO.1**
5. **REMOVE FAN ASSY**
 - (a) Disconnect the connector.
 - (b) Remove the 6 bolts and fan.
6. **REMOVE COOLING FAN ECU**
 - (a) Disconnect the 2 connectors.
 - (b) Remove the 2 screws and ECU.
7. **REMOVE FAN**
 - (a) Remove the 2 nuts and 2 fans.

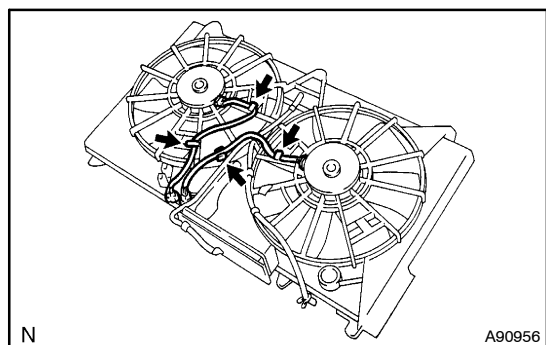

8. REMOVE COOLING FAN MOTOR

- (a) Disconnect the 2 wires from the fan shroud.
- (b) Remove the 6 screws and 2 cooling fan motors.

9. INSTALL FAN ASSY

- (a) Install the fan with the 6 bolts.
Torque: 5.0 N·m (51 kgf·cm, 44 in.-lbf)