


TURN SIGNAL SWITCH ASSY

REPLACEMENT


6511G-01

1. PRECAUTION (SEE PAGE 60-1)
2. SEPARATE BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)
3. PLACE FRONT WHEELS FACING STRAIGHT AHEAD
4. REMOVE SWITCH & VOLUME CASE (SEE PAGE 60-22)
5. REMOVE STEERING WHEEL COVER LOWER NO.2 (SEE PAGE 60-22)
6. REMOVE HORN BUTTON ASSY (SEE PAGE 60-22)
7. REMOVE STEERING WHEEL ASSY (SEE PAGE 50-10)
SST 09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05021)
8. REMOVE STEERING COLUMN COVER (SEE PAGE 50-10)
9. REMOVE SPIRAL CABLE SUB-ASSY (SEE PAGE 60-31)

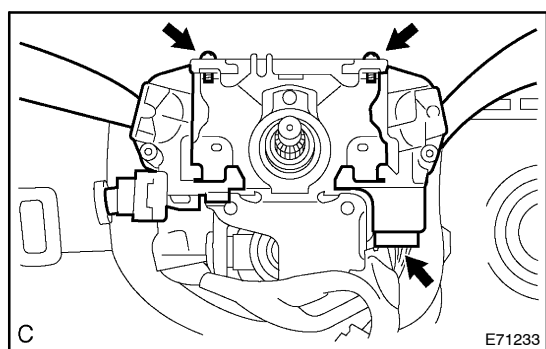

10. REMOVE TURN SIGNAL SWITCH ASSY

- (a) Disconnect the connector.
- (b) Remove the 2 screws and the turn signal switch assy.

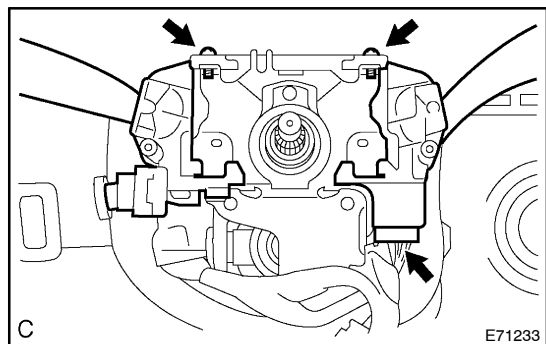

11. INSTALL TURN SIGNAL SWITCH ASSY

- (a) Install the turn signal switch assy and the 2 screws.
- (b) Connect the connector.

12. INSTALL SPIRAL CABLE SUB-ASSY (SEE PAGE 60-31)
13. INSTALL STEERING COLUMN COVER (SEE PAGE 50-10)
14. INSTALL STEERING WHEEL ASSY (SEE PAGE 50-10)
SST 09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05021)
15. PLACE FRONT WHEELS FACING STRAIGHT AHEAD
16. INSTALL HORN BUTTON ASSY (SEE PAGE 60-22)
17. INSTALL STEERING WHEEL COVER LOWER NO.2 (SEE PAGE 60-22)
18. INSTALL SWITCH & VOLUME CASE (SEE PAGE 60-22)
19. CONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)
20. INSPECT SRS WARNING LIGHT (SEE PAGE 05-954)
21. PERFORM INITIALIZATION (SEE PAGE 01-20)