


INSTALLATION

1. INSTALL WIPER MOTOR AND LINK ASSEMBLY

- (a) Install the wiper motor and link assembly.
- (b) Connect the connector.
- (c) Install and torque the 4 bolts.

Torque: 5.5 N·m (56 kgf·cm, 49 in·lbf)

2. INSTALL WIPER MOTOR COVER

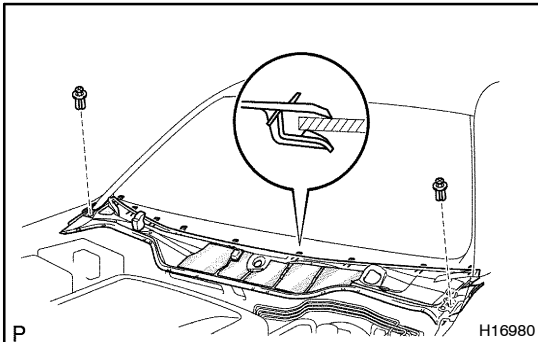


3. INSTALL COWL TOP VENTILATOR LOUVER

- (a) Install the cowl top ventilator louver with the 2 clips.

HINT:

With the front side of the louver raised, install the protector on the glass, then push the louver down.

- (b) Install the body to cowl louver weatherstrip.

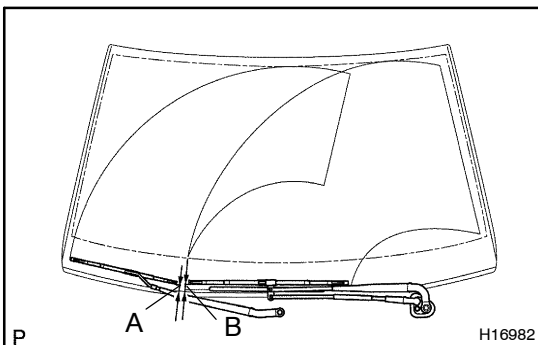

4. INSTALL WIPER ARMS

Install the wiper arms.

- (1) Install the wiper arms, and operate the wipers once and turn the wiper switch OFF.
- (2) Bolt the sub-arm stay of the D seat-side wiper arm in the motor.
- (3) Fasten the P seat side wiper nut while attaching the P seat-side wiper arm to the stopper part of the P seat-side cowl top ventilator louver.
- (4) Fasten the D seat-side wiper nut while attaching the blade-side hinge part of the D seat-side wiper arm to the cutout part of the P seat-side wiper arm head.

A: 30 – 40 mm (1.18 – 1.57 in.)

B: 70 – 80 mm (2.76 – 3.15 in.)

Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)