


# THERMOSTAT REPLACEMENT

160ST-01


1. REMOVE AIR CLEANER INLET NO.1 (See page 14-26)
2. DRAIN ENGINE COOLANT (See page 16-8)

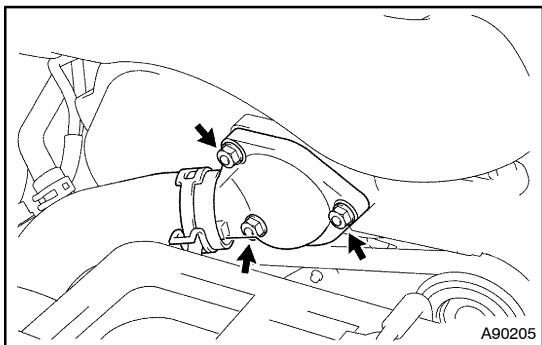

## 3. REMOVE THERMOSTAT

Remove the 3 nuts and disconnect the water inlet from the water inlet housing.

- (a) Remove the thermostat.
- (b) Remove the gasket from the thermostat.

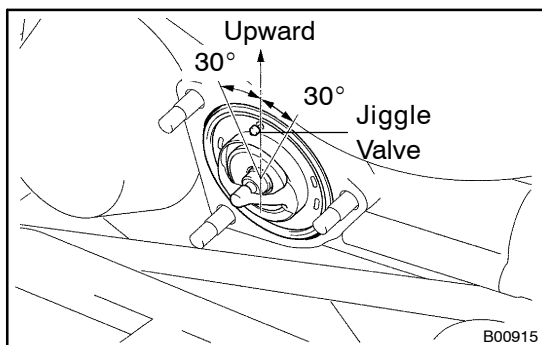


## 4. INSTALL THERMOSTAT

- (a) Install a new gasket to the thermostat.
- (b) Insert the thermostat into the water inlet housing with the jiggle valve facing straight upward.

### HINT:

the jiggle valve may be set within 30° of either side of the prescribed position.

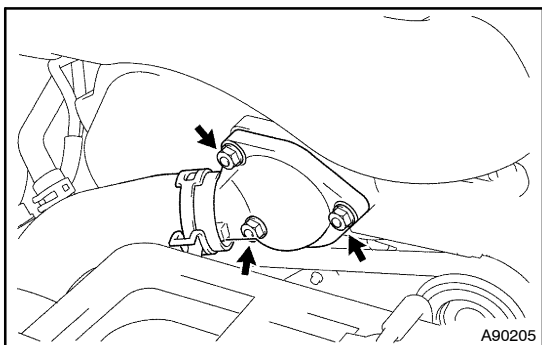

- (c) Install the water inlet with the 3 nuts.  
**Torque: 19 N·m (195 kgf·cm, 14 ft·lbf)**

5. REFILL ENGINE COOLANT (See page 16-8)
6. CHECK FOR ENGINE COOLANT LEAKS (See page 16-1)
7. INSTALL AIR CLEANER INLET NO.1 (See page 14-26)