


## INSPECTION

### 1. INSPECT DISC, PLATE AND FLANGE

Check to see if the sliding surface of the disc, plate and flange are worn or burnt. If necessary, replace them.

HINT:

- If the lining of the disc is peeling off or discolored, or even if a part of the printed numbers is defaced, replace all discs.
- Before assembling new discs, soak them in ATF for at least 15 minutes.

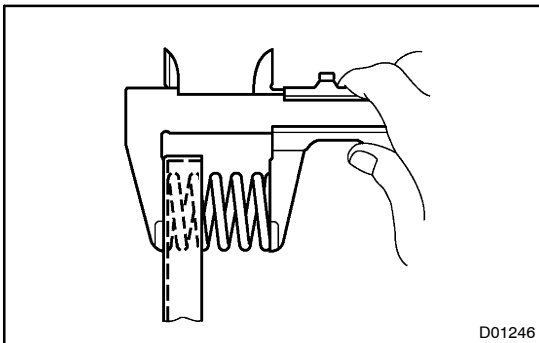

### 2. CHECK O/D BRAKE PISTON RETURN SPRING

Measure the free length of the spring together with the spring seat.

**Standard free length: 17.82 mm (0.702 in.)**