

DTC	B1656	SEAT BELT BUCKLE SWITCH (LH) MALFUNCTION
------------	--------------	---


CIRCUIT DESCRIPTION


The seat belt buckle switch LH circuit consists of the airbag sensor assy center and the front seat inner belt assy LH (seat belt buckle switch LH).

DTC B1656 is recorded when a malfunction is detected in the seat belt buckle switch LH circuit.

DTC No.	DTC Detecting Condition	Trouble Area
B1656	<ul style="list-style-type: none"> When the airbag sensor assy center receives an open signal, short to ground signal or B+ short signal in the seat belt buckle switch LH circuit for 2 seconds. Front seat inner belt assy LH malfunction Airbag sensor assy center malfunction 	<ul style="list-style-type: none"> Floor wire No.2 Front seat inner belt assy LH (Seat belt buckle switch LH) Airbag sensor assy center

WIRING DIAGRAM

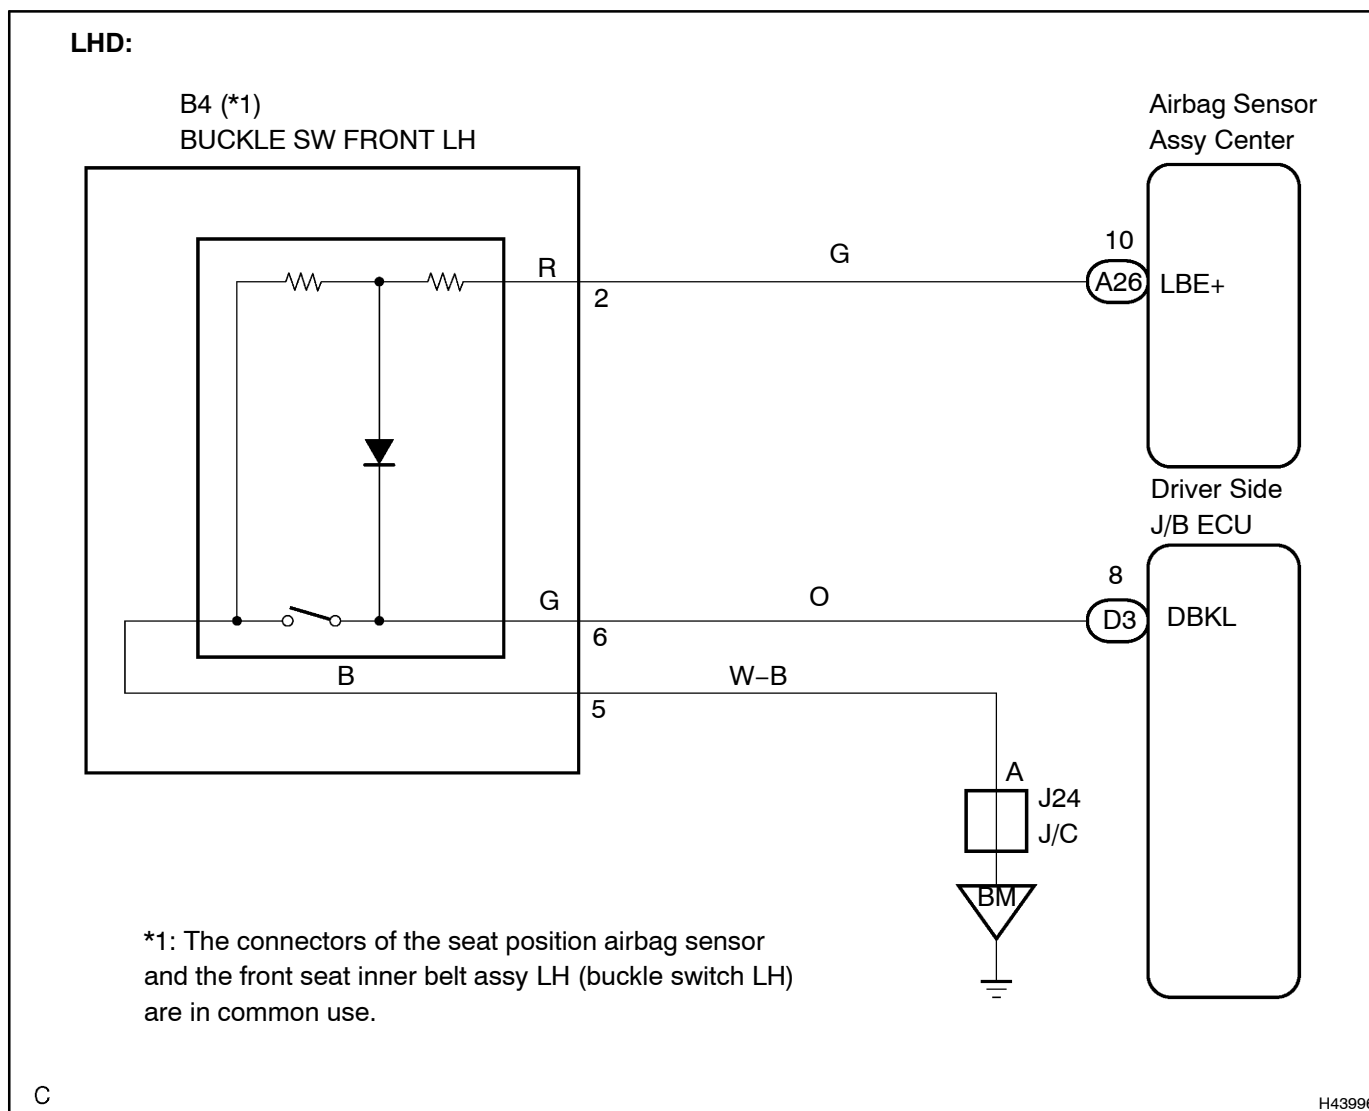

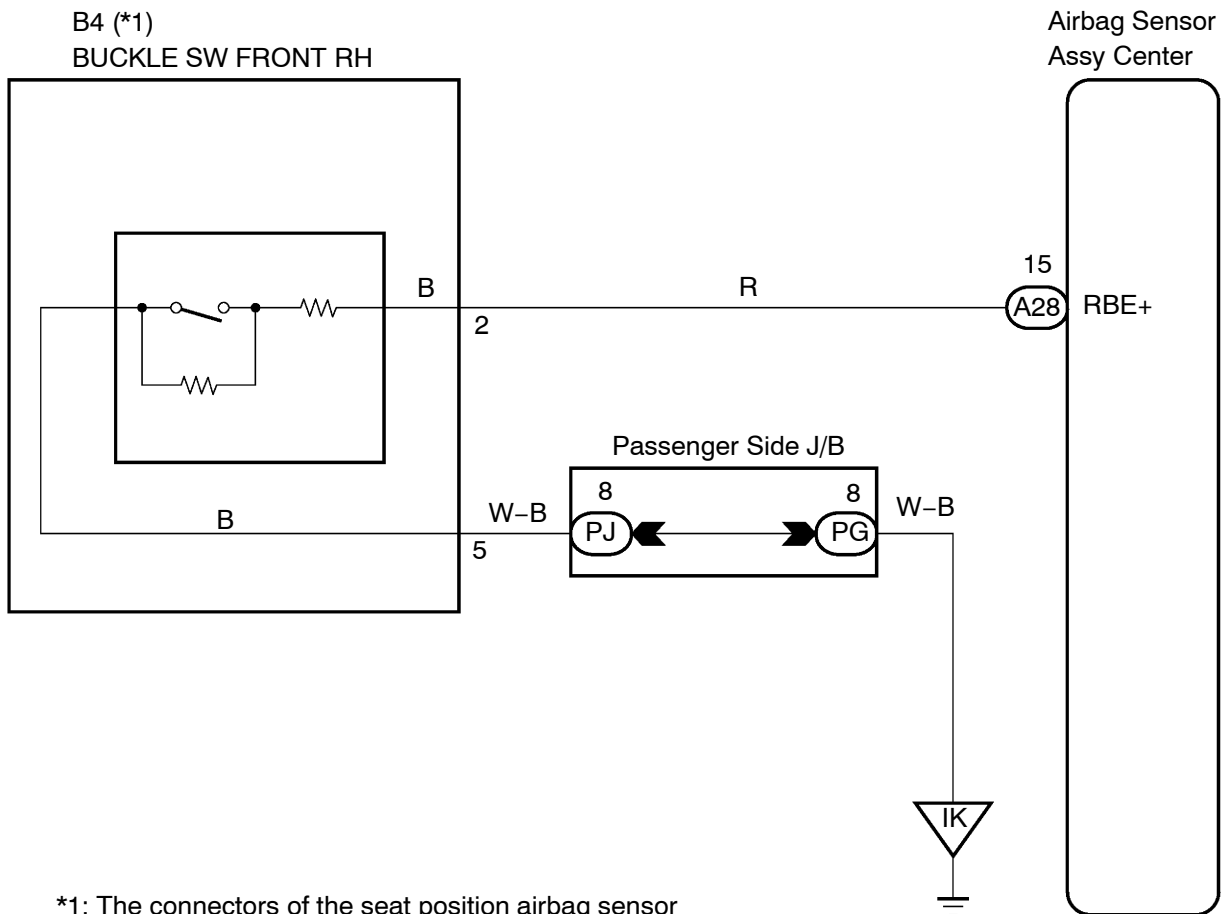RHD:

*1: The connectors of the seat position airbag sensor and the front seat inner belt assy RH (buckle switch RH) are in common use.

C

H43995


INSPECTION PROCEDURE

CAUTION:

Be sure to perform the following procedures before troubleshooting to avoid unexpected airbag deployment.

- (a) Turn the ignition switch to the LOCK position.
- (b) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- (c) Disconnect the connectors from the airbag sensor Assy center.
- (d) Disconnect the connectors from the horn button Assy.
- (e) Disconnect the connector from the front passenger airbag Assy.
- (f) Disconnect the connector from the instrument panel airbag Assy lower No. 1.
- (g) Disconnect the connector from the instrument panel airbag Assy lower No. 2.
- (h) Disconnect the connector from the front seat airbag Assy LH.
- (i) Disconnect the connector from the front seat airbag Assy RH.
- (j) Disconnect the connector from the curtain shield airbag Assy LH.
- (k) Disconnect the connector from the curtain shield airbag Assy RH.
- (l) Disconnect the connector from the front seat outer belt Assy LH.
- (m) Disconnect the connector from the front seat outer belt Assy RH.
- (n) Disconnect the connectors from the rear seat 3-point type outer belt Assy.

1 CHECK DTC

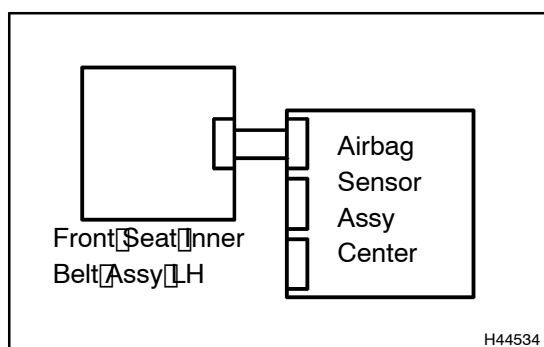

- (a) Connect the connectors to the airbag sensor Assy center.
- (b) Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- (c) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- (d) Clear the DTCs stored in memory (see page 05-959).
- (e) Turn the ignition switch to the LOCK position.
- (f) Turn the ignition switch to the ON position and wait for at least 60 seconds.
- (g) Check the DTCs (see page 05-959).

OK:

DTC B1656 is not output.

HINT:

Codes other than code B1656 may be output at this time, but they are not related to this check.

NG

Go to step 2

OK

USE SIMULATION METHOD TO CHECK (SEE PAGE 05-954)

2

CHECK CONNECTION OF CONNECTORS

- (a)
- Turn the ignition switch to the LOCK position.
- (b)
- Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- (c)
- Check that the connectors are properly connected to the airbag sensor assy center and the front seat inner belt assy LH.

OK:
The connectors are connected.


NG

CONNECT CONNECTORS, THEN GO TO STEP 1

OK

3

CHECK FLOOR WIRE NO.2(TO B+)

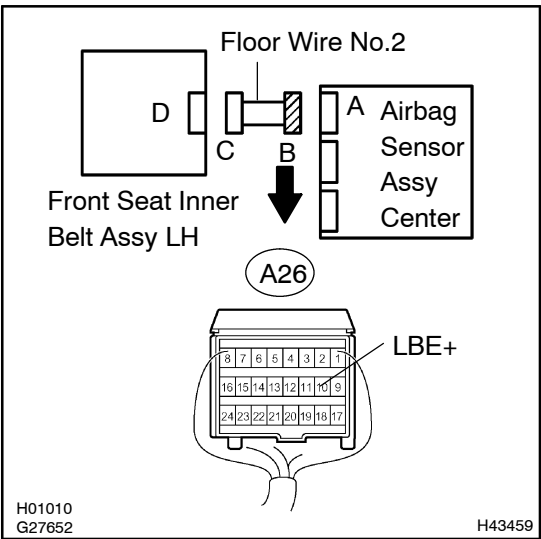

- (a)
- Disconnect the connector from the front seat inner belt assy LH and the airbag sensor assy center.
- (b)
- Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- (c)
- Turn the ignition switch to the ON position.
- (d)
- Measure the voltage according to the value(s) in the table below.

Standard:


Tester connection	Condition	Specified condition
A26-10 (LBE+) - Body ground	Ignition switch ON	Below 1 V

NG

REPAIR OR REPLACE FLOOR WIRE NO.2

OK

4 CHECK FLOOR WIRE NO.2(TO GROUND)

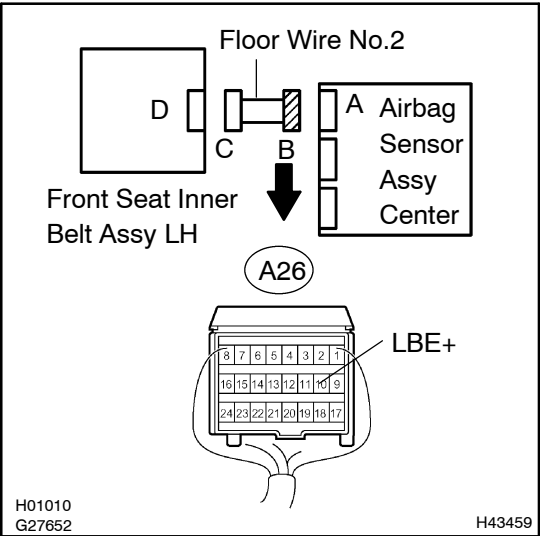

- (a) Turn the ignition switch to the LOCK position.
- (b) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- (c) Measure the resistance according to the value(s) in the table below.

Standard:


Tester connection	Condition	Specified condition
A26-10 (LBE+) - Body ground	Always	1 MΩ or Higher

NG

REPAIR OR REPLACE FLOOR WIRE NO.2

OK

5 CHECK FLOOR WIRE NO.2(OPEN)

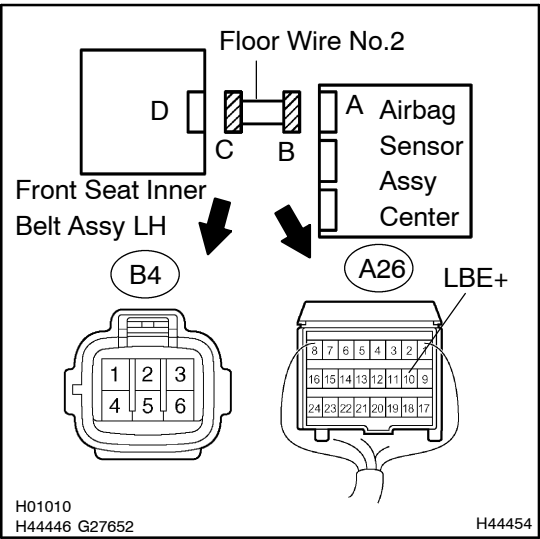

- (a) Measure the resistance according to the value(s) in the table below.

Standard:


Tester connection	Condition	Specified condition
B4-2 - A26-10 (LBE+)	Always	Below 1 Ω

NG

REPAIR OR REPLACE FLOOR WIRE NO.2

OK

6 CHECK FRONT SEAT INNER BELT ASSY LH

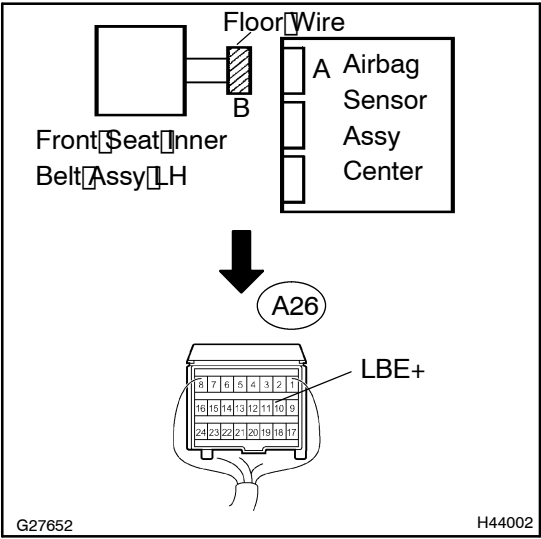

- (a) Connect the connector to the front seat inner belt assy LH.
- (b) Unfasten the seat belt for the front seat LH.
- (c) Measure the resistance according to the value(s) in the table below.


Standard:

Tester Connection	Condition	Specified Condition
A26-10 (LBE+) - Body Ground	Unfasten the seat belt	1,250 to 1,450 Ω

NG REPLACE FRONT SEAT INNER BELT ASSY LH (SEE PAGE 72-3)

OK

7 CHECK FRONT SEAT INNER BELT ASSY LH

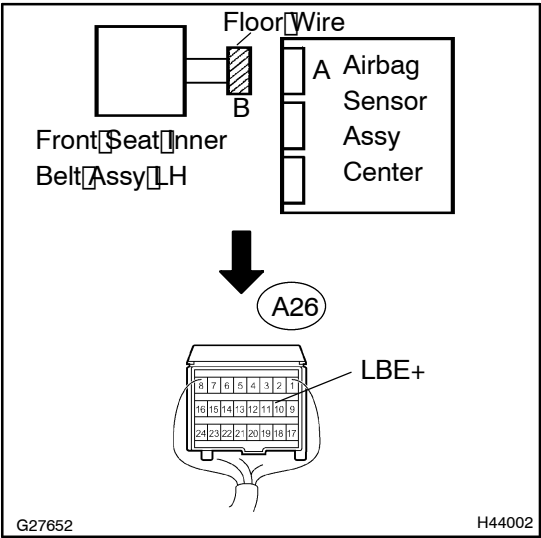

- (a) Fasten the seat belt for the front seat LH.
- (b) Measure the resistance according to the value(s) in the table below.


Standard:

Tester Connection	Condition	Specified Condition
A26-10 (LBE+) - Body Ground	Fasten the seat belt	300 to 360 Ω

NG REPLACE FRONT SEAT INNER BELT ASSY LH (SEE PAGE 72-3)

OK

8 CHECK AIR BAG SENSOR ASSY CENTER

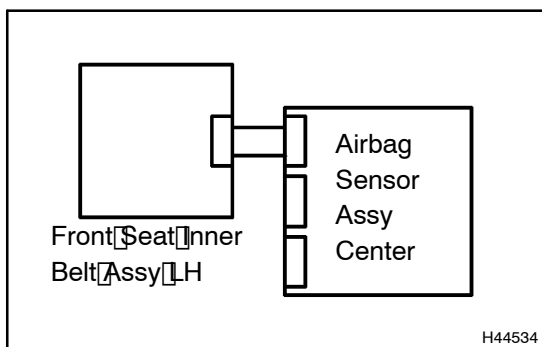

- Connect the connectors to the airbag sensor assy center.
- Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- Clear the DTCs stored in memory (see page 05-959).
- Turn the ignition switch to the LOCK position.
- Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- Check the DTCs (see page 05-959).

OK:

DTC B1656 is not output.

HINT:

Codes other than code B1656 may be output at this time, but they are not related to this check.

NG

**REPLACE AIR BAG SENSOR ASSY CENTER
(SEE PAGE 60-74)**

OK

USE SIMULATION METHOD TO CHECK (SEE PAGE 05-954)