

REMOVAL


1. REMOVE FRONT WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

2. REMOVE STABILIZER BAR LINKS

Remove the 4 nuts, 2 bolts and stabilizer bar links.

Torque: 55 N·m (570 kgf·cm, 41 ft·lbf)

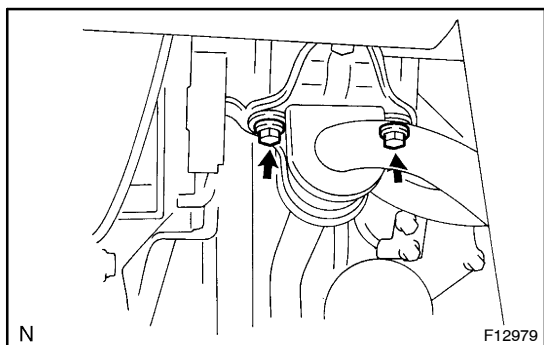

3. REMOVE STABILIZER BAR

(a) Remove the 4 bolts, right and left stabilizer bar brackets.

Torque: 23 N·m (235 kgf·cm, 27 ft·lbf)

(b) Pull out the stabilizer bar.

(c) Remove the both bushings.

HINT:

At the time of installation, please refer to the following items.

Install the bushing to the stabilizer bar so that the cutout of the bushing will face to the front.