

HEADLAMP SWIVEL ECU ASSY (LHD)


REPLACEMENT

6511J-01

HINT:

Install in the reverse order of removal.

1. PRECAUTION (SEE PAGE 60-1)
2. SEPARATE BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)
3. REMOVE INSTRUMENT PANEL UNDER COVER SUB-ASSY NO.2 (SEE PAGE 71-6)
4. REMOVE INSTRUMENT PANEL GARNISH SUB-ASSY RH (SEE PAGE 71-6)
5. REMOVE GLOVE COMPARTMENT PLATE (SEE PAGE 71-6)
6. REMOVE GLOVE COMPARTMENT HOLE COVER (SEE PAGE 71-6)
7. REMOVE GLOVE COMPARTMENT DOOR ASSY W/ INSTRUMENT PANEL AIRBAG ASSY LOWER NO.2 (SEE PAGE 71-6)

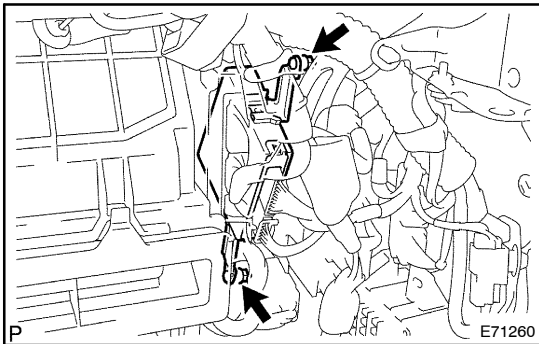

8. REMOVE HEADLAMP SWIVEL ECU ASSY

- (a) Disconnect the connector.
- (b) Remove the 2 nuts and the headlamp swivel ECU.

9. CONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)
10. INSPECT SRS WARNING LIGHT (SEE PAGE 05-954)
11. PERFORM INITIALIZATION (SEE PAGE 01-20)