


DISASSEMBLY

1. REMOVE LUGGAGE COMPARTMENT DOOR LOCK

- (a) Disconnect the connector.
 - (b) Remove the 2 bolts and luggage compartment door lock.
- Torque: 5.5 N·m (56 kgf·cm, 49 in·lbf)**

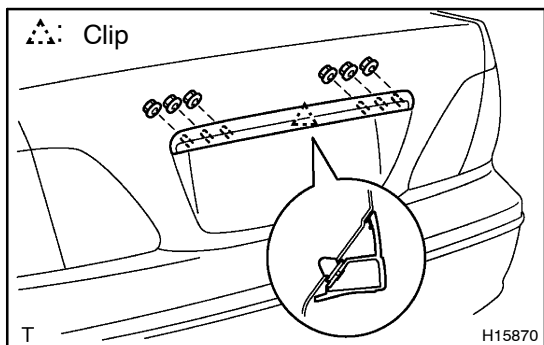


2. REMOVE LUGGAGE COMPARTMENT DOOR OUTSIDE GARNISH

- (a) Disconnect the cable from the key cylinder.
- (b) Disconnect the connector.
- (c) w/o Smart key system:
Remove the 6 nuts and key cylinder.
- (d) w/ Smart key system:
Disconnect the connector.
- (e) w/ Smart key system:
Remove the 6 nuts, key cylinder and smart luggage open switch.
- (f) Using a screwdriver, remove the luggage compartment door outside garnish.

HINT:

Tape the screwdriver tip before use.

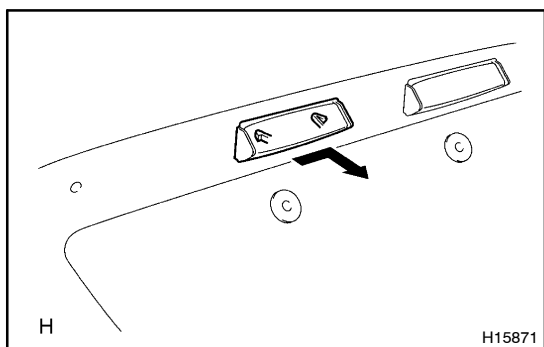

3. REMOVE LICENSE PLATE LIGHT

- (a) Disconnect the connector.
- (b) Remove the licence plate light as shown in the illustration.
- (c) Employ the same manner described above to the other side.

4. REMOVE COMBINATION LIGHT

Remove the 3 nuts and combination light.