


KICK-DOWN SWITCH ON-VEHICLE REPAIR

ATOYG-01

1. REMOVE FRONT DOOR SCUFF PLATE
(See page BO-131)
2. REMOVE ACCELERATOR PEDAL (See page BO-144)
3. PULL BACK FLOOR CARPET

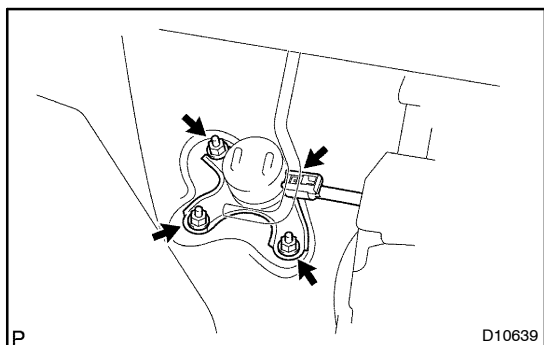

4. REMOVE KICK-DOWN SWITCH
 - (a) Disconnect the kick-down switch connector.
 - (b) Remove the 3 bolts and kick-down switch.
5. INSTALL KICK-DOWN SWITCH
 - (a) Install the kick-down switch with the 3 bolts.
 - (b) Connect the kick-down switch connector.
6. RETURN FLOOR CARPET
7. INSTALL ACCELERATOR PEDAL (See page BO-144)
8. INSTALL FRONT DOOR SCUFF PLATE
(See page BO-143)