


## REPLACEMENT

1. REMOVE V-BANK COVER (See page 14-26)
2. REMOVE ENGINE ROOM SIDE COVER (See page 14-26)
3. REMOVE INTAKE AIR CONNECTOR PIPE (See page 14-26)
4. REMOVE OIL LEVEL GAGE SUB-ASSY (See page 17-9)

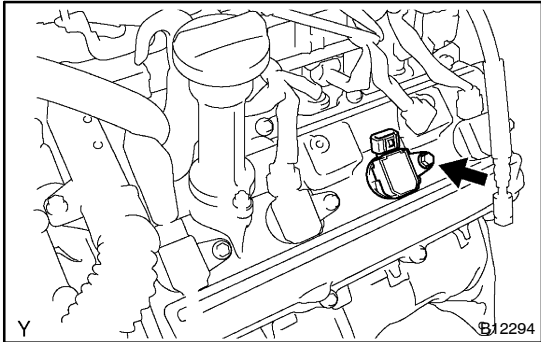

### 5. REMOVE IGNITION COIL ASSY

- (a) Disconnect the ignition coil connector.
- (b) Remove the bolt and pull out the ignition coil.

### 6. INSTALL IGNITION COIL ASSY

- (a) Connect a new ignition coil to the spark plug, attach the ignition coil to the cylinder head cover, and install the bolt.  
**Torque: 7.5 N·m (80 kgf·cm, 66 in·lbf)**
- (b) Connect the ignition coil connector.

7. INSTALL OIL LEVEL GAGE SUB-ASSY (See page 17-9)
8. INSTALL INTAKE AIR CONNECTOR PIPE (See page 14-26)
9. INSTALL V-BANK COVER (See page 14-26)
10. INSTALL ENGINE ROOM SIDE COVER (See page 14-26)