


## REPLACEMENT

1. REMOVE V-BANK COVER AND ENGINE SIDE COVERS
2. REMOVE INTAKE AIR CONNECTOR PIPE
3. REMOVE ENGINE OIL LEVEL GAUGE AND GUIDE
4. REMOVE IGNITION COILS

(a) Disconnect the 8 ignition coil connectors.

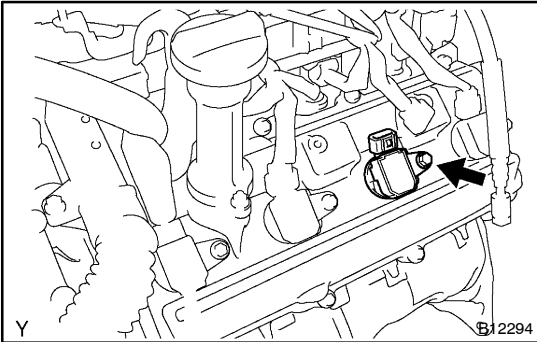

(b) Remove the bolt, and pull out the ignition coil. Remove the 8 ignition coils.

### 5. REINSTALL NEW IGNITION COILS

(a) Connect a new ignition coil to the spark plug, and attach the ignition coil to the cylinder head cover, and install the bolt. Install the 8 ignition coils.

**Torque: 7.5 N·m (80 kgf·cm, 66 in·lbf)**

(b) Connect the 8 ignition coil connectors.

6. INSTALL ENGINE OIL LEVEL GAUGE AND GUIDE
7. REINSTALL INTAKE AIR CONNECTOR PIPE
8. REINSTALL V-BANK COVER AND ENGINE SIDE COVERS