


ILLUMINATION FOR PANEL SWITCH DOES NOT COME ON WITH TAIL SWITCH ON

INSPECTION PROCEDURE

1 DISPLAY CHECK MODE (VEHICLE SIGNAL CHECK MODE)

(a) Enter the "Display Check" mode (Vehicle Signal Check Mode) (see page 05-1755).

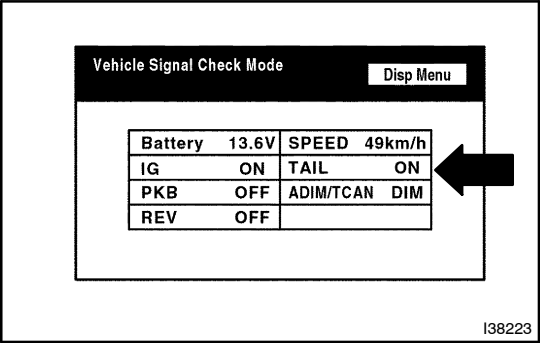

(b) Turn the light control switch TAIL, HEAD or OFF position.

Standard:

TAIL Switch	Display
TAIL or ON	ON
OFF	OFF

HINT:  
This display is updated once per second. As a result, it is normal for the display to lag behind the actual change in the switch.

OK

REPLACE MULTI-DISPLAY  
(SEE PAGE 67-8)

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE  
(SEE PAGE 05-1771)