


STEERING SENSOR REPLACEMENT


320X3-02

1. PRECAUTION (SEE PAGE 60-1)
2. SEPARATE BATTERY NEGATIVE TERMINAL (SEE PAGE 01-5)
3. PLACE FRONT WHEELS FACING STRAIGHT AHEAD
4. REMOVE HORN BUTTON ASSY (SEE PAGE 50-10)
5. REMOVE STEERING WHEEL ASSY (SEE PAGE 50-10)
SST 09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05021)
6. REMOVE STEERING COLUMN COVER (SEE PAGE 50-10)
7. REMOVE SPIRAL CABLE SUB-ASSY (SEE PAGE 60-31)

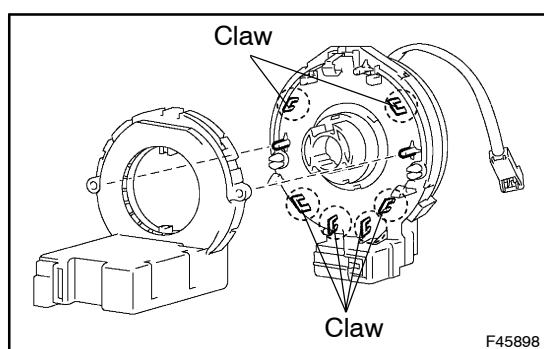

8. REMOVE STEERING SENSOR

- (a) Release 6 claw fittings and remove the steering sensor from the spiral cable.

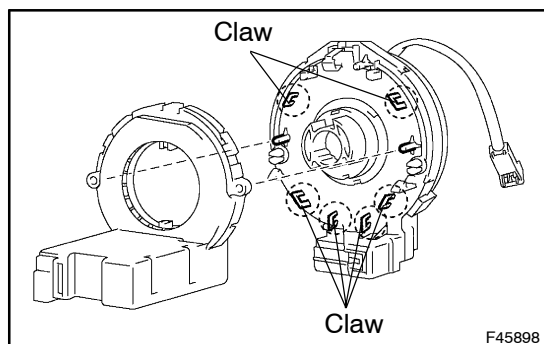

9. INSTALL STEERING SENSOR

- (a) Install the steering sensor to the spiral cable.

NOTICE:

- Install the claw securely.
- Do not damage the claw.

10. ADJUST CENTER FRONT WHEEL
11. INSTALL SPIRAL CABLE SUB-ASSY (SEE PAGE 60-31)
12. CENTER SPIRAL CABLE (SEE PAGE 60-31)
13. INSTALL STEERING COLUMN COVER
14. INSTALL STEERING WHEEL ASSY (SEE PAGE 50-10)
15. INSTALL HORN BUTTON ASSY (SEE PAGE 50-10)
16. INSPECT STEERING WHEEL CENTER POINT
17. INSPECT HORN BUTTON ASSY (SEE PAGE 60-22)
18. INSPECT SRS WARNING LIGHT (SEE PAGE 05-954)
19. INSPECT ABS WARNING LIGHT AND VSC WARNING LIGHT (SEE PAGE 05-399)