


MAP DISC CANNOT BE INSERTED

INSPECTION PROCEDURE

1 CHECK MAP DISC

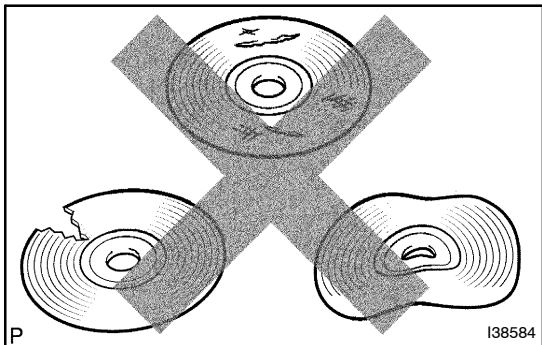

(a) Check that the map disc is not deformed or cracked.

OK: No deformations or cracks appear on the map disc.

NG

REPLACE THE MAP DISC

OK

2 CHECK NAVIGATION ECU

(a) Check if the "PUSH" indicator near the disc slot comes on.

OK: It does not come on.

NG

PRESS THE EJECT SWITCH TO EJECT THE DISC

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-1771)